



SW-MOTECH
BAGS-CONNECTION



YAMAHA
Selection

YAMAHA

FZ 6



- QUICK-LOCK EVO Tankring. Schwarz. QUICK-LOCK EVO Tankring. Black. 03 – 10 TRT.00.640.11000/B
- QUICK-LOCK EVO Micro. Schwarz. QUICK-LOCK EVO Micro. Black. 03 – 10 BC.TRS.00.110.20000
- QUICK-LOCK EVO Daypack. Schwarz. QUICK-LOCK EVO Daypack. Black. 03 – 10 BC.TRS.00.108.20000
- QUICK-LOCK EVO City. Schwarz. QUICK-LOCK EVO City. Black. 03 – 10 BC.TRS.00.104.20000
- QUICK-LOCK EVO Elektrik Micro. Schwarz. QUICK-LOCK EVO Electric Micro. Black. 03 – 10 BC.TRE.00.110.20000
- QUICK-LOCK EVO Elektrik Daypack. Schwarz. QUICK-LOCK EVO Electric Daypack. Black. 03 – 10 BC.TRE.00.108.20000
- QUICK-LOCK EVO Elektrik City. Schwarz. QUICK-LOCK EVO Electric City. Black. 03 – 10 BC.TRE.00.104.20000
- BLAZE® Satteltaschen-Set. Schwarz. BLAZE® Panniers Set. Black. 06 – 10 BC.HTA.06.740.10200/B
- QUICK-LOCK EVO Kofferträger. Schwarz. QUICK-LOCK EVO Side Carrier. Black. 03 – 06 KFT.06.314.20000/B
- QUICK-LOCK Kontur-Kofferträger. Schwarz. QUICK-LOCK Profile Side Carrier. Black. 06 – 10 KFT.06.348.150
- QUICK-LOCK EVO Kofferträger. Schwarz. QUICK-LOCK EVO Side Carrier. Black. 06 – 10 KFT.06.348.20000/B
- 1 AERO ABS-Seitenkoffersystem. Schwarz. AERO ABS Sidecase System. Black. 06 – 10 KFT.06.348.60000/B
- 2 ALU-RACK. Schwarz. ALU-RACK. Black. 03 – 10 GPT.06.313.100/B
- Hecktasche Slipstream. Schwarz. Tailbag Slipstream. Black. 03 – 10 BC.HTA.00.307.10000
- Hecktasche Rearbag. Schwarz. Tailbag Rearbag. Black. 03 – 10 BC.HTA.00.304.10000
- Hecktasche Rackpack. Schwarz. Tailbag Rackpack. Black. 03 – 10 BC.HTA.00.305.10000
- Hecktasche Cargobag. Schwarz. Tailbag Cargobag. Black. 03 – 10 BC.HTA.00.306.10000
- Hecktasche Speedpack®. Schwarz. Tailbag Speedpack®. Black. 03 – 10 BC.HTA.00.301.10000
- 3 QUICK-LOCK GPS-Halter. Schwarz. QUICK-LOCK GPS Mount. Black. 03 – 10 GPS.06.646.10000/B
- Nonshock GPS-Halter Cockpit. Schwarz. Nonshock Cockpit GPS Mount. Black. 06 – 10 GPS.06.677.10000/B
- Lenkererhöhung. Schwarz. ø 22 mm. h 20 mm. Bar Riser. Black. ø 22 mm. h 20 mm. 03 – 10 LEH.00.039.150/20/B
- Lenkererhöhung. Silber. ø 22 mm. h 20 mm. Bar Riser. Silver. ø 22 mm. h 20 mm. 03 – 10 LEH.00.039.150/20/S
- Spiegelverlängerung. Schwarz. Lenker ausleger. Mirror Extension. Black. Universal. 03 – 10 SVL.00.504.101
- 4 Schutzbügel. Schwarz. Crashbar. Black. 03 – 10 SBL.06.316.100/B
- Sturzpad-Kit. Frame Slider Kit. 03 – 10 STP.06.590.10000/B
- Hauptständer. Schwarz. Centerstand. Black. 03 – 10 HPS.06.315.100



YAMAHA

FZ 6 Fazer



- QUICK-LOCK EVO Tankring. Schwarz. QUICK-LOCK EVO Tankring. Black. 03 – 10 TRT.00.640.11000/B
- QUICK-LOCK EVO Micro. Schwarz. QUICK-LOCK EVO Micro. Black. 03 – 10 BC.TRS.00.110.20000
- QUICK-LOCK EVO Daypack. Schwarz. QUICK-LOCK EVO Daypack. Black. 03 – 10 BC.TRS.00.108.20000
- QUICK-LOCK EVO City. Schwarz. QUICK-LOCK EVO City. Black. 03 – 10 BC.TRS.00.104.20000
- QUICK-LOCK EVO Sport. Schwarz. QUICK-LOCK EVO Sport. Black. 03 – 10 BC.TRS.00.101.20000
- QUICK-LOCK EVO Elektrik Micro. Schwarz. QUICK-LOCK EVO Electric Micro. Black. 03 – 10 BC.TRE.00.110.20000
- QUICK-LOCK EVO Elektrik Daypack. Schwarz. QUICK-LOCK EVO Electric Daypack. Black. 03 – 10 BC.TRE.00.108.20000
- QUICK-LOCK EVO Elektrik City. Schwarz. QUICK-LOCK EVO Electric City. Black. 03 – 10 BC.TRE.00.104.20000
- QUICK-LOCK EVO Elektrik Sport. Schwarz. QUICK-LOCK EVO Electric Sport. Black. 03 – 10 BC.TRE.00.101.20000
- 1 QUICK-LOCK EVO Kofferträger. Schwarz. QUICK-LOCK EVO Side Carrier. Black. 06 – 10 KFT.06.314.20000/B
- QUICK-LOCK Kontur-Kofferträger. Schwarz. QUICK-LOCK Profile Side Carrier. Black. 06 – 10 KFT.06.348.150
- 2 AERO ABS-Seitenkoffersystem. Schwarz. AERO ABS Sidecase System. Black. 06 – 10 KFT.06.348.60000/B
- ALU-RACK. Schwarz. ALU-RACK. Black. 06 – 10 GPT.06.313.100/B
- Hecktasche Slipstream. Schwarz. Tailbag Slipstream. Black. 03 – 10 BC.HTA.00.307.10000
- Hecktasche Rearbag. Schwarz. Tailbag Rearbag. Black. 03 – 10 BC.HTA.00.304.10000
- Hecktasche Rackpack. Schwarz. Tailbag Rackpack. Black. 03 – 10 BC.HTA.00.305.10000
- Hecktasche Cargobag. Schwarz. Tailbag Cargobag. Black. 03 – 10 BC.HTA.00.306.10000
- Hecktasche Speedpack®. Schwarz. Tailbag Speedpack®. Black. 03 – 10 BC.HTA.00.301.10000
- QUICK-LOCK GPS-Halter. Schwarz. QUICK-LOCK GPS Mount. Black. 03 – 10 GPS.06.646.10000/B
- Nonshock GPS-Halter Cockpit. Schwarz. Nonshock Cockpit GPS Mount. Black. 06 – 10 GPS.06.677.10000/B
- Lenkererhöhung. Schwarz. ø 22 mm. h 20 mm. Bar Riser. Black. ø 22 mm. h 20 mm. 03 – 10 LEH.00.039.150/20/B
- Lenkererhöhung. Silber. ø 22 mm. h 20 mm. Bar Riser. Silver. ø 22 mm. h 20 mm. 03 – 10 LEH.00.039.150/20/S
- Lenker-Konverter-Set. Schwarz. Bar Converter Set. Black. 03 – 10 LEH.00.039.168/B
- Lenker-Konverter-Set. Silber. Bar Converter Set. Silver. 03 – 10 LEH.00.039.168/S
- 3 Spiegelverlängerung. Schwarz. Kontur-Distanzstück. Mirror Extension. Black. Profile. 03 – 10 SVL.06.501.10800/B
- Schutzbügel. Schwarz. Crashbar. Black. 03 – 10 SBL.06.316.100/B
- Sturzpad-Kit. Frame Slider Kit. 06 – 10 STP.06.590.10000/B
- Hauptständer. Schwarz. Centerstand. Black. 03 – 10 HPS.06.315.100





FZS 600 Fazer

- QUICK-LOCK EVO Tankring. Schwarz. QUICK-LOCK EVO Tankring. Black. 97 – 03 TRT.00.640.11000/B
 QUICK-LOCK EVO Micro. Schwarz. QUICK-LOCK EVO Micro. Black. 97 – 03 BC.TRS.00.110.20000
 QUICK-LOCK EVO Daypack. Schwarz. QUICK-LOCK EVO Daypack. Black. 97 – 03 BC.TRS.00.108.20000
 QUICK-LOCK EVO Sport. Schwarz. QUICK-LOCK EVO Sport. Black. 97 – 03 BC.TRS.00.101.20000
 QUICK-LOCK EVO Elektrik Micro. Schwarz. QUICK-LOCK EVO Electric Micro. Black. 97 – 03 BC.TRE.00.110.20000
 QUICK-LOCK EVO Elektrik Daypack. Schwarz. QUICK-LOCK EVO Electric Daypack. Black. 97 – 03 BC.TRE.00.108.20000
 QUICK-LOCK EVO Elektrik Sport. Schwarz. QUICK-LOCK EVO Electric Sport. Black. 97 – 03 BC.TRE.00.101.20000
 QUICK-LOCK Kofferträger. Schwarz. QUICK-LOCK Side Carrier. Black. 97 – 03 KFT.06.063.100

- 2 ALU-RACK. Schwarz. ALU-RACK. Black. 97 – 03 GPT.06.237.100/B
 Hecktasche Slipstream. Schwarz. Tailbag Slipstream. Black. 97 – 03 BC.HTA.00.307.10000
 Hecktasche Rearbag. Schwarz. Tailbag Rearbag. Black. 97 – 03 BC.HTA.00.304.10000
 Hecktasche Rackpack. Schwarz. Tailbag Rackpack. Black. 97 – 03 BC.HTA.00.305.10000
 3 Hecktasche Cargobag. Schwarz. Tailbag Cargobag. Black. 97 – 03 BC.HTA.00.306.10000
 Hecktasche Racepack®. Schwarz. Tailbag Racepack®. Black. 97 – 03 BC.HTA.00.302.10000
 4 Hecktasche Speedpack®. Schwarz. Tailbag Speedpack®. Black. 97 – 03 BC.HTA.00.301.10000
 Lenkererhöhung. Schwarz. ø 22 mm. h 30 mm. Bar Riser. Black. ø 22 mm. h 30 mm. 97 – 03 LEH.00.039.150/30/B
 Lenkererhöhung. Silber. ø 22 mm. h 30 mm. Bar Riser. Silver. ø 22 mm. h 30 mm. 97 – 03 LEH.00.039.150/30/S
 Lenkerverlegung. Schwarz. Barback. Black. 97 – 03 LEH.00.039.152/B
 Lenkerverlegung. Silber. Barback. Silver. 97 – 03 LEH.00.039.152/S
 Lenker-Konverter-Set. Schwarz. Bar Converter Set. Black. 97 – 03 LEH.00.039.168/B
 Lenker-Konverter-Set. Silber. Bar Converter Set. Silver. 97 – 03 LEH.00.039.168/S
 Spiegelverlängerung. Schwarz. Kontur-Distanzstück. Mirror Extension. Black. Profile. 97 – 01 SVL.06.501.103
 Spiegelverlängerung. Schwarz. Kontur-Distanzstück. Mirror Extension. Black. Profile. 02 – 03 SVL.06.501.104



XJ 6

- QUICK-LOCK EVO Tankring. Schwarz. QUICK-LOCK EVO Tankring. Black. 08 – TRT.00.640.11000/B
 QUICK-LOCK EVO Micro. Schwarz. QUICK-LOCK EVO Micro. Black. 08 – BC.TRS.00.110.20000
 QUICK-LOCK EVO Daypack. Schwarz. QUICK-LOCK EVO Daypack. Black. 08 – BC.TRS.00.108.20000
 QUICK-LOCK EVO City. Schwarz. QUICK-LOCK EVO City. Black. 08 – BC.TRS.00.104.20000
 QUICK-LOCK EVO Elektrik Micro. Schwarz. QUICK-LOCK EVO Electric Micro. Black. 08 – BC.TRE.00.110.20000



- QUICK-LOCK EVO Elektrik Daypack. Schwarz. QUICK-LOCK EVO Electric Daypack. Black. 08 – BC.TRE.00.108.20000
 QUICK-LOCK EVO Elektrik City. Schwarz. QUICK-LOCK EVO Electric City. Black. 08 – BC.TRE.00.104.20000
 BLAZE® Satteltaschen-Set. Schwarz. BLAZE® Panniers Set. Black. 08 – BC.HTA.06.740.10500/B
 1 QUICK-LOCK EVO Kofferträger. Schwarz. QUICK-LOCK EVO Side Carrier. Black. 08 – KFT.06.478.20000/B
 AERO ABS-Seitenkoffersystem. Schwarz. AERO ABS Sidecase System. Black. 08 – KFT.06.478.60000/B
 ALU-RACK. Schwarz. ALU-RACK. Black. 08 – GPT.06.479.15000/B
 Hecktasche Slipstream. Schwarz. Tailbag Slipstream. Black. 08 – BC.HTA.00.307.10000
 Hecktasche Rearbag. Schwarz. Tailbag Rearbag. Black. 08 – BC.HTA.00.304.10000
 Hecktasche Rackpack. Schwarz. Tailbag Rackpack. Black. 08 – BC.HTA.00.305.10000
 Hecktasche Cargobag. Schwarz. Tailbag Cargobag. Black. 08 – BC.HTA.00.306.10000
 Hecktasche Speedpack®. Schwarz. Tailbag Speedpack®. Black. 08 – BC.HTA.00.301.10000
 Nonshock Endurance Lenker S. Schwarz. Nonshock Endurance Bar S. Black. 08 – LEN.00.156.11000/B
 QUICK-LOCK GPS-Halter. Schwarz. QUICK-LOCK GPS Mount. Black. 08 – GPS.00.646.10000/B
 Lenkererhöhung. Schwarz. ø 22 mm. h 25 mm. Bar Riser. Black. ø 22 mm. h 25 mm. 08 – LEH.00.039.150/25/B
 Lenkererhöhung. Silber. ø 22 mm. h 25 mm. Bar Riser. Silver. ø 22 mm. h 25 mm. 08 – LEH.00.039.150/25/S
 Lenkeraufnahme. Schwarz. Bar Mount. Black. 08 – LEH.00.039.16200.02/B
 Lenkeraufnahme. Silber. Bar Mount. Silver. 08 – LEH.00.039.16200.02/S
 BB STORM Handprotektoren-Kit. Schwarz. BB STORM Handguard Kit. Black. 08 – 11 HPR.00.220.10900/B
 KOBRA Handprotektoren-Kit. Schwarz. KOBRA Handguard Kit. Black. 08 – 11 HPR.00.220.20900/B
 Spiegelverlängerung. Schwarz. Lenkerausleger. Mirror Extension. Black. Universal. 08 – SVL.00.504.101
 2 Schutzbügel. Schwarz. Crashbar. Black. 08 – SBL.06.480.10000/B
 3 Sturzpad-Kit. Frame Slider Kit. 08 – STP.06.590.10500/B
 4 Hauptständer. Schwarz. Centerstand. Black. 08 – HPS.06.656.10000/B





- QUICK-LOCK EVO Tankring. Schwarz. QUICK-LOCK EVO Tankring. Black. 08 – TRT.00.640.11000/B
- QUICK-LOCK EVO Micro. Schwarz. QUICK-LOCK EVO Micro. Black. 08 – BC.TRS.00.110.20000
- QUICK-LOCK EVO Daypack. Schwarz. QUICK-LOCK EVO Daypack. Black. 08 – BC.TRS.00.108.20000
- QUICK-LOCK EVO City. Schwarz. QUICK-LOCK EVO City. Black. 08 – BC.TRS.00.104.20000
- QUICK-LOCK EVO Elektrik Micro. Schwarz. QUICK-LOCK EVO Electric Micro. Black. 08 – BC.TRE.00.110.20000
- QUICK-LOCK EVO Elektrik Daypack. Schwarz. QUICK-LOCK EVO Electric Daypack. Black. 08 – BC.TRE.00.108.20000
- QUICK-LOCK EVO Elektrik City. Schwarz. QUICK-LOCK EVO Electric City. Black. 08 – BC.TRE.00.104.20000
- 1** BLAZE® Satteltaschen-Set. Schwarz. BLAZE® Panniers Set. Black. 08 – BC.HTA.06.740.10500/B
- QUICK-LOCK EVO Kofferträger. Schwarz. QUICK-LOCK Side Carrier. Black. 08 – KFT.06.478.20000/B
- AERO ABS-Seitenkoffersystem. Schwarz. AERO ABS Sidecase System. Black. 08 – KFT.06.478.60000/B
- ALU-RACK. Schwarz. ALU-RACK. Black. 08 – GPT.06.479.15000/B
- Hecktasche Slipstream. Schwarz. Tailbag Slipstream. Black. 08 – BC.HTA.00.307.10000
- Hecktasche Rearbag. Schwarz. Tailbag Rearbag. Black. 08 – BC.HTA.00.304.10000
- Hecktasche Rackpack. Schwarz. Tailbag Rackpack. Black. 08 – BC.HTA.00.305.10000
- Hecktasche Cargobag. Schwarz. Tailbag Cargobag. Black. 08 – BC.HTA.00.306.10000
- Hecktasche Speedpack®. Schwarz. Tailbag Speedpack®. Black. 08 – BC.HTA.00.301.10000
- Nonshock Endurance Lenker S. Schwarz. Nonshock Endurance Bar S. Black. 08 – LEN.00.156.11000/B
- Lenkererhöhung. Schwarz. ø 22 mm. h 25 mm. Bar Riser. Black. ø 22 mm. h 25 mm. 08 – LEH.00.039.150/25/B
- Lenkererhöhung. Silber. ø 22 mm. h 25 mm. Bar Riser. Silver. ø 22 mm. h 25 mm. 08 – LEH.00.039.150/25/S
- Lenkeraufnahme. Schwarz. Bar Mount. Black. 08 – LEH.00.039.16200.02/B
- Lenkeraufnahme. Silber. Bar Mount. Silver. 08 – LEH.00.039.16200.02/S
- 2** QUICK-LOCK GPS-Halter. Schwarz. QUICK-LOCK GPS Mount. Black. 08 – GPS.00.646.10000/B
- 3** Spiegelverlängerung. Schwarz. Kontur-Distanzstück. Mirror Extension. Black. Profile. 08 – SVL.06.501.10700/B
- Schutzbügel. Schwarz. Crashbar. Black. 08 – SBL.06.480.10000/B
- Sturzpad-Kit Frame Slider Kit 08 – STP.06.590.10500/B
- Hauptständer. Schwarz. Centerstand. Black. 08 – HPS.06.656.10000/B



- QUICK-LOCK EVO Tankring. Schwarz. QUICK-LOCK EVO Tankring. Black. 10 – TRT.00.640.11000/B
- QUICK-LOCK EVO Micro. Schwarz. QUICK-LOCK EVO Micro. Black. 10 – BC.TRS.00.110.20000
- QUICK-LOCK EVO Daypack. Schwarz. QUICK-LOCK EVO Daypack. Black. 10 – BC.TRS.00.108.20000
- QUICK-LOCK EVO City. Schwarz. QUICK-LOCK EVO City. Black. 10 – BC.TRS.00.104.20000
- QUICK-LOCK EVO Elektrik Micro. Schwarz. QUICK-LOCK EVO Electric Micro. Black. 10 – BC.TRE.00.110.20000
- QUICK-LOCK EVO Elektrik Daypack. Schwarz. QUICK-LOCK EVO Electric Daypack. Black. 10 – BC.TRE.00.108.20000
- QUICK-LOCK EVO Elektrik City. Schwarz. QUICK-LOCK EVO Electric City. Black. 10 – BC.TRE.00.104.20000
- BLAZE® Satteltaschen-Set. Schwarz. BLAZE® Panniers Set. Black. 10 – BC.HTA.06.740.10500/B
- 1** QUICK-LOCK EVO Kofferträger. Schwarz. QUICK-LOCK EVO Side Carrier. Black. 10 – KFT.06.478.20000/B
- AERO ABS-Seitenkoffersystem. Schwarz. AERO ABS Sidecase System. Black. 10 – KFT.06.478.60000/B
- ALU-RACK. Schwarz. ALU-RACK. Black. 10 – GPT.06.479.15000/B
- Hecktasche Slipstream. Schwarz. Tailbag Slipstream. Black. 10 – BC.HTA.00.307.10000
- Hecktasche Rearbag. Schwarz. Tailbag Rearbag. Black. 10 – BC.HTA.00.304.10000
- Hecktasche Rackpack. Schwarz. Tailbag Rackpack. Black. 10 – BC.HTA.00.305.10000
- Hecktasche Cargobag. Schwarz. Tailbag Cargobag. Black. 10 – BC.HTA.00.306.10000
- Hecktasche Speedpack®. Schwarz. Tailbag Speedpack®. Black. 10 – BC.HTA.00.301.10000
- Lenkererhöhung. Schwarz. ø 22 mm. h 20 mm. Bar Riser. Black. ø 22 mm. h 20 mm. 10 – LEH.00.039.150/20/B
- Lenkererhöhung. Silber. ø 22 mm. h 20 mm. Bar Riser. Silver. ø 22 mm. h 20 mm. 10 – LEH.00.039.150/20/S
- 2** Spiegelverlängerung. Schwarz. Kontur-Distanzstück. Mirror Extension. Black. Profile. 10 – SVL.06.501.11100/B
- QUICK-LOCK GPS-Halter. Schwarz. QUICK-LOCK GPS Mount. Black. 10 – GPS.00.646.10000/B
- 3** Sturzpad-Kit Frame Slider Kit 10 – STP.06.590.10800/B
- Hauptständer. Schwarz. Centerstand. Black. 10 – HPS.06.656.10000/B





- QUICK-LOCK EVO Tankring. Schwarz. QUICK-LOCK EVO Tankring. Black. 98 – [TRT.00.640.11000/B](#)
 QUICK-LOCK EVO Micro. Schwarz. QUICK-LOCK EVO Micro. Black. 98 – [BC.TRS.00.110.20000](#)
 QUICK-LOCK EVO Daypack. Schwarz. QUICK-LOCK EVO Daypack. Black. 98 – [BC.TRS.00.108.20000](#)
 QUICK-LOCK EVO Sport. Schwarz. QUICK-LOCK EVO Sport. Black. 98 – [BC.TRS.00.101.20000](#)
 QUICK-LOCK EVO Elektrik Micro. Schwarz. QUICK-LOCK EVO Electric Micro. Black. 98 – [BC.TRE.00.110.20000](#)
 QUICK-LOCK EVO Elektrik Daypack. Schwarz. QUICK-LOCK EVO Electric Daypack. Black. 98 – [BC.TRE.00.108.20000](#)
 QUICK-LOCK EVO Elektrik Sport. Schwarz. QUICK-LOCK EVO Electric Sport. Black. 98 – [BC.TRE.00.101.20000](#)
- 1** BLAZE® Satteltaschen-Set. Schwarz. BLAZE® Panniers Set. Black. 08 – [BC.HTA.06.740.10400/B](#)
 Hecktasche Slipstream. Schwarz. Tailbag Slipstream. Black. 98 – [BC.HTA.00.307.10000](#)
 Hecktasche Rearbag. Schwarz. Tailbag Rearbag. Black. 98 – [BC.HTA.00.304.10000](#)
 Hecktasche Cargobag. Schwarz. Tailbag Cargobag. Black. 98 – [BC.HTA.00.306.10000](#)
 Hecktasche Racepack®. Schwarz. Tailbag Racepack®. Black. 98 – [BC.HTA.00.302.10000](#)
 Hecktasche Speedpack®. Schwarz. Tailbag Speedpack®. Black. 98 – [BC.HTA.00.301.10000](#)
- Spiegelverlängerung. Schwarz. Kontur-Distanzstück. Mirror Extension. Black. Profile. 98 – 03 [+ SVL.06.501.103](#)
 Spiegelverlängerung. Schwarz. Kontur-Distanzstück. Mirror Extension. Black. Profile. 03 – 05 [+ SVL.06.501.102](#)
- 2** Spiegelverlängerung. Schwarz. Kontur-Distanzstück. Mirror Extension. Black. Profile. 08 – [+ SVL.06.501.10600/B](#)
3 Sturzpadd-Kit Frame Slider Kit 08 – [STP.06.590.10200/B](#)



- QUICK-LOCK EVO Tankring. Schwarz. QUICK-LOCK EVO Tankring. Black. 05 – [TRT.00.640.11000/B](#)
1 QUICK-LOCK EVO Micro. Schwarz. QUICK-LOCK EVO Micro. Black. 05 – [BC.TRS.00.110.20000](#)
2 QUICK-LOCK EVO Daypack. Schwarz. QUICK-LOCK EVO Daypack. Black. 05 – [BC.TRS.00.108.20000](#)
 QUICK-LOCK EVO City. Schwarz. QUICK-LOCK EVO City. Black. 05 – [BC.TRS.00.104.20000](#)
 QUICK-LOCK EVO Elektrik Micro. Schwarz. QUICK-LOCK EVO Electric Micro. Black. 05 – [BC.TRE.00.110.20000](#)
 QUICK-LOCK EVO Elektrik Daypack. Schwarz. QUICK-LOCK EVO Electric Daypack. Black. 05 – [BC.TRE.00.108.20000](#)
 QUICK-LOCK EVO Elektrik City. Schwarz. QUICK-LOCK EVO Electric City. Black. 05 – [BC.TRE.00.104.20000](#)
- 3** ALU-RACK. Schwarz. ALU-RACK. Black. 05 – [GPT.06.546.15000/B](#)
 Hecktasche Slipstream. Schwarz. Tailbag Slipstream. Black. 05 – [BC.HTA.00.307.10000](#)
 Hecktasche Rearbag. Schwarz. Tailbag Rearbag. Black. 05 – [BC.HTA.00.304.10000](#)
 Hecktasche Rackpack. Schwarz. Tailbag Rackpack. Black. 05 – [BC.HTA.00.305.10000](#)
 Hecktasche Cargobag. Schwarz. Tailbag Cargobag. Black. 05 – [BC.HTA.00.306.10000](#)
 Hecktasche Speedpack®. Schwarz. Tailbag Speedpack®. Black. 05 – [BC.HTA.00.301.10000](#)
 Lenkererhöhung. Schwarz. ø 22 mm. h 30 mm. Bar Riser. Black. ø 22 mm. h 30 mm. 05 – 06 [+ LEH.00.039.150/30/B](#)
 Lenkererhöhung. Silber. ø 22 mm. h 30 mm. Bar Riser. Silver. ø 22 mm. h 30 mm. 05 – 06 [+ LEH.00.039.150/30/S](#)
 Lenkerverlegung. Schwarz. Barback. Black. 05 – 06 [+ LEH.00.039.152/B](#)
 Lenkerverlegung. Silber. Barback. Silver. 05 – 06 [+ LEH.00.039.152/S](#)
 Lenker-Konverter-Set. Schwarz. Bar Converter Set. Black. 05 – 06 [+ LEH.00.039.168/B](#)
 Lenker-Konverter-Set. Silber. Bar Converter Set. Silver. 05 – 06 [+ LEH.00.039.168/S](#)
 Spiegelverlängerung. Schwarz. Lenkerausleger. Mirror Extension. Black. Universal. 05 – [+ SVL.00.504.101](#)
- 4** Schutzbügel. Schwarz. Crashbar. Black. 05 – [SBL.06.547.100](#)
 Hauptständer. Schwarz. Centerstand. Black. 05 – [+ HPS.06.545.100](#)





XT 660 R

- Riemen-Tankrucksack Enduro LT. Schwarz. Strap Tankbag Enduro LT. Black. 04 – BC.TRS.00.131.10000
- 1 Riemen-Tankrucksack Enduro. Schwarz. Strap Tankbag Enduro. Black. 04 – BC.TRS.00.130.10000
- 2 QUICK-LOCK EVO Kofferträger. Schwarz. QUICK-LOCK EVO Side Carrier. Black. 04 – 09 KFT.06.282.200
- 3 ALU-RACK. Schwarz. ALU-RACK. Black. 04 – 09 GPT.06.281.100/B
- Hecktasche Slipstream. Schwarz. Tailbag Slipstream. Black. 04 – BC.HTA.00.307.10000
- Hecktasche Rearbag. Schwarz. Tailbag Rearbag. Black. 04 – BC.HTA.00.304.10000
- Hecktasche Rackpack. Schwarz. Tailbag Rackpack. Black. 04 – BC.HTA.00.305.10000
- Nonshock Endurance Lenker. Schwarz. Nonshock Endurance Bar. Black. 04 – 09 LEN.00.156.10001/B
- Lenkererhöhung. Schwarz. ø 22 mm. h 30 mm. Bar Riser. Black. ø 22 mm. h 30 mm. 04 – 09 LEH.00.039.150/30/B
- Lenkererhöhung. Silber. ø 22 mm. h 30 mm. Bar Riser. Silver. ø 22 mm. h 30 mm. 04 – 09 LEH.00.039.150/30/S
- Lenkerverlegung. Schwarz. Barback. Black. 04 – 09 LEH.00.039.152/B
- Lenkerverlegung. Silber. Barback. Silver. 04 – 09 LEH.00.039.152/S
- Lenkeraufnahme. Schwarz. Bar Mount. Black. 04 – 09 LEH.00.039.16200.02/B
- Lenkeraufnahme. Silber. Bar Mount. Silver. 04 – 09 LEH.00.039.16200.02/S
- Lenker-Konverter-Set. Schwarz. Bar Converter Set. Black. 04 – 09 LEH.00.039.168/B
- Lenker-Konverter-Set. Silber. Bar Converter Set. Silver. 04 – 09 LEH.00.039.168/S
- Spiegelverlängerung. Schwarz. Lenkerausleger. Mirror Extension. Black. Universal. 04 – 09 SVL.00.504.101
- BB STORM Handprotektoren-Kit. Schwarz. BB STORM Handguard Kit. Black. 04 – 09 HPR.00.220.10900/B



- KOBRA Handprotektoren-Kit. Schwarz. KOBRA Handguard Kit. Black. 04 – 09 HPR.00.220.20900/B
- Schutzbügel. Schwarz. Crashbar. Black. 04 – 09 SBL.06.284.100
- 4 Fußrasten-Kit. Silber. Footrest Kit. Silver. 04 – 09 FRS.06.011.10100/S
- 5 Motorschutz. Silber. Engine Guard. Silver. 04 – 09 MSS.06.371.100
- Hauptständer. Schwarz. Centerstand. Black. 04 – 09 HPS.06.290.100


XT 660 X

- Riemen-Tankrucksack Enduro LT. Schwarz. Strap Tankbag Enduro LT. Black. 04 – BC.TRS.00.131.10000
- Riemen-Tankrucksack Enduro. Schwarz. Strap Tankbag Enduro. Black. 04 – BC.TRS.00.130.10000
- QUICK-LOCK EVO Kofferträger. Schwarz. QUICK-LOCK EVO Side Carrier. Black. 04 – KFT.06.282.200
- 6 ALU-RACK. Schwarz. ALU-RACK. Black. 04 – GPT.06.281.100/B
- Hecktasche Slipstream. Schwarz. Tailbag Slipstream. Black. 04 – BC.HTA.00.307.10000
- Hecktasche Rearbag. Schwarz. Tailbag Rearbag. Black. 04 – BC.HTA.00.304.10000
- Hecktasche Rackpack. Schwarz. Tailbag Rackpack. Black. 04 – BC.HTA.00.305.10000
- Nonshock Endurance Lenker. Schwarz. Nonshock Endurance Bar. Black. 04 – LEN.00.156.10001/B
- Lenkererhöhung. Schwarz. ø 22 mm. h 30 mm. Bar Riser. Black. ø 22 mm. h 30 mm. 04 – LEH.00.039.150/30/B
- Lenkererhöhung. Silber. ø 22 mm. h 30 mm. Bar Riser. Silver. ø 22 mm. h 30 mm. 04 – LEH.00.039.150/30/S
- Lenkerverlegung. Schwarz. Barback. Black. 04 – LEH.00.039.152/B
- Lenkerverlegung. Silber. Barback. Silver. 04 – LEH.00.039.152/S
- Lenkeraufnahme. Schwarz. Bar Mount. Black. 04 – LEH.00.039.16200.02/B
- Lenkeraufnahme. Silber. Bar Mount. Silver. 04 – LEH.00.039.16200.02/S
- Lenker-Konverter-Set. Schwarz. Bar Converter Set. Black. 04 – LEH.00.039.168/B
- Lenker-Konverter-Set. Silber. Bar Converter Set. Silver. 04 – LEH.00.039.168/S
- Spiegelverlängerung. Schwarz. Lenkerausleger. Mirror Extension. Black. Universal. 04 – SVL.00.504.101
- BB STORM Handprotektoren-Kit. Schwarz. BB STORM Handguard Kit. Black. 04 – HPR.00.220.10900/B
- KOBRA Handprotektoren-Kit. Schwarz. KOBRA Handguard Kit. Black. 04 – HPR.00.220.20900/B
- Fußrasten-Kit. Silber. Footrest Kit. Silver. 04 – FRS.06.011.10100/S
- 7 Schutzbügel. Schwarz. Crashbar. Black. 04 – SBL.06.284.100
- Motorschutz. Silber. Engine Guard. Silver. 04 – MSS.06.371.100
- Hauptständer. Schwarz. Centerstand. Black. 04 – HPS.06.290.100





- Riemen-Tankrucksack Enduro LT. Schwarz. Strap Tankbag Enduro LT. Black. 07 – BC.TRS.00.131.10000
- Riemen-Tankrucksack Enduro. Schwarz. Strap Tankbag Enduro. Black. 07 – BC.TRS.00.130.10000
- 1** QUICK-LOCK EVO Kofferträger. Schwarz. QUICK-LOCK EVO Side Carrier. Black. 07 – KFT.06.570.200
- TraX® EVO Koffersystem. Schwarz. 37/37 l. TraX® EVO Pannier System. Black. 37/37 l. 07 – KFT.06.570.50000/B
- TraX® EVO Koffersystem. Silber. 37/37 l. TraX® EVO Pannier System. Silver. 37/37 l. 07 – KFT.06.570.50000/S
- TraX® EVO Koffersystem. Schwarz. 45/45 l. TraX® EVO Pannier System. Black. 45/45 l. 07 – KFT.06.570.50100/B
- TraX® EVO Koffersystem. Silber. 45/45 l. TraX® EVO Pannier System. Silver. 45/45 l. 07 – KFT.06.570.50100/S
- 2** ALU-RACK. Schwarz. ALU-RACK. Black. 07 – GPT.06.569.15000/B
- 3** STEEL-RACK. Schwarz. STEEL-RACK. Black. 07 – GPT.06.569.20001/B
- 4** Hecktasche Slipstream. Schwarz. Tailbag Slipstream. Black. 07 – BC.HTA.00.307.10000
- Hecktasche Jetpack. Schwarz. Tailbag Jetpack. Black. 07 – BC.HTA.00.303.10000
- Hecktasche Rearbag. Schwarz. Tailbag Rearbag. Black. 07 – BC.HTA.00.304.10000
- Hecktasche Rackpack. Schwarz. Tailbag Rackpack. Black. 07 – BC.HTA.00.305.10000
- 5** Hecktasche Cargobag. Schwarz. Tailbag Cargobag. Black. 07 – BC.HTA.00.306.10000
- Hecktasche Speedpack®. Schwarz. Tailbag Speedpack®. Black. 07 – BC.HTA.00.301.10000

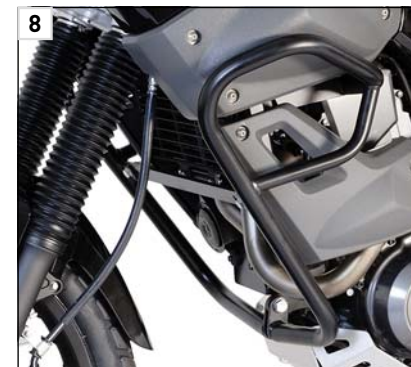


- Nonshock Endurance Lenker. Schwarz. Nonshock Endurance Bar. Black. 07 – 10 LEN.00.156.10001/B
- Lenkererhöhung. Schwarz. ø 22 mm. h 20 mm. Bar Riser. Black. ø 22 mm. h 20 mm. 07 – 09 LEH.00.039.150/20/B
- Lenkererhöhung. Silber. ø 22 mm. h 20 mm. Bar Riser. Silver. ø 22 mm. h 20 mm. 07 – 09 LEH.00.039.150/20/S
- Lenkererhöhung. Schwarz. ø 22 mm. h 25 mm. Bar Riser. Black. ø 22 mm. h 25 mm. 07 – 09 LEH.00.039.150/25/B
- Lenkererhöhung. ø 22 mm. h 25 mm. Silber. Bar Riser. Silver. ø 22 mm. h 25 mm. 07 – 09 LEH.00.039.150/25/S
- Lenkeraufnahme. Schwarz. Bar Mount. Black. 07 – 10 LEH.00.039.16200.02/B
- Lenkeraufnahme. Silber. Bar Mount. Silver. 07 – 10 LEH.00.039.16200.02/S
- Spiegelverlängerung. Schwarz. Lenkerausleger. Mirror Extension. Black. Universal. 07 – 10 SVL.00.504.101
- BB STORM Handprotektoren-Kit. Schwarz. BB STORM Handguard Kit. Black. 07 – HPR.00.220.10600/B
- KOBRA Handprotektoren-Kit. Schwarz. KOBRA Handguard Kit. Black. 07 – HPR.00.220.20600/B
- 6** HAWK Scheinwerferhalter-Set. Schwarz. HAWK Light Mount Set. Black. 07 – NSW.06.004.10000/B
- 7** HAWK Nebelscheinwerfer-Set. Schwarz. HAWK Fog Light Set. Black. 07 – NSW.06.004.50000/B
- HAWK Nebelscheinwerfer-Set. Silber. HAWK Fog Light Set. Silver. 07 – NSW.06.004.50000/S
- 8** Schutzbügel. Schwarz. Crashbar. Black. 07 – SBL.06.567.100
- Kettenschutz. Silber. Chain Guard. Silver. 07 – KTS.06.190.100
- Fußrasten-Kit. Silber. Footrest Kit. Silver. 07 – 10 FRS.06.011.10100/S
- 9** Motorschutz. Silber. Engine Guard. Silver. 07 – MSS.06.571.100
- Hauptständer. Schwarz. Centerstand. Black. 07 – 10 HPS.06.568.100





- QUICK-LOCK EVO Tankring. Schwarz. QUICK-LOCK EVO Tankring. Black. 10 – [TRT.00.640.11000/B](#)
 QUICK-LOCK EVO Micro. Schwarz. QUICK-LOCK EVO Micro. Black. 10 – [BC.TRS.00.110.20000](#)
 QUICK-LOCK EVO Daypack. Schwarz. QUICK-LOCK EVO Daypack. Black. 10 – [BC.TRS.00.108.20000](#)
 QUICK-LOCK EVO City. Schwarz. QUICK-LOCK EVO City. Black. 10 – [BC.TRS.00.104.20000](#)
 QUICK-LOCK EVO GS. Schwarz. QUICK-LOCK EVO GS. Black. 10 – [BC.TRS.00.103.20000](#)
 QUICK-LOCK EVO Sport. Schwarz. QUICK-LOCK EVO Sport. Black. 10 – [BC.TRS.00.101.20000](#)
 QUICK-LOCK EVO Elektrik Micro. Schwarz. QUICK-LOCK EVO Electric Micro. Black. 10 – [BC.TRE.00.110.20000](#)
 QUICK-LOCK EVO Elektrik Daypack. Schwarz. QUICK-LOCK EVO Electric Daypack. Black. 10 – [BC.TRE.00.108.20000](#)
 QUICK-LOCK EVO Elektrik City. Schwarz. QUICK-LOCK EVO Electric City. Black. 10 – [BC.TRE.00.104.20000](#)
 QUICK-LOCK EVO Elektrik GS. Schwarz. QUICK-LOCK EVO Electric GS. Black. 10 – [BC.TRE.00.103.20000](#)
 QUICK-LOCK EVO Elektrik Sport. Schwarz. QUICK-LOCK EVO Electric Sport. Black. 10 – [BC.TRE.00.101.20000](#)
1 BLAZE® Satteltaschen-Set. Schwarz. BLAZE® Panniers Set. Black. 10 – [BC.HTA.06.740.10300/B](#)
 QUICK-LOCK Kontur-Kofferträger. Schwarz. QUICK-LOCK Profile Side Carrier. Black. 10 – [KFT.06.727.15000/B](#)
2 QUICK-LOCK EVO Kofferträger. Schwarz. QUICK-LOCK EVO Side Carrier. Black. 10 – [KFT.06.727.20000/B](#)
 AERO ABS-Seitenkoffersystem. Schwarz. AERO ABS Sidecase System. Black. 10 – [KFT.06.727.60000/B](#)
 ALU-RACK. Schwarz. ALU-RACK. Black. 10 – [GPT.06.171.10000/B](#)
 Hecktasche Slipstream. Schwarz. Tailbag Slipstream. Black. 10 – [BC.HTA.00.307.10000](#)
 Hecktasche Rearbag. Schwarz. Tailbag Rearbag. Black. 10 – [BC.HTA.00.304.10000](#)
 Hecktasche Rackpack. Schwarz. Tailbag Rackpack. Black. 10 – [BC.HTA.00.305.10000](#)
 Hecktasche Cargobag. Schwarz. Tailbag Cargobag. Black. 10 – [BC.HTA.00.306.10000](#)
 Hecktasche Speedpack®. Schwarz. Tailbag Speedpack®. Black. 10 – [BC.HTA.00.301.10000](#)
 Lenkererhöhung. Schwarz. ø 22 mm. h 20 mm. Bar Riser. Black. ø 22 mm. h 20 mm. 10 – [LEH.00.039.150/20/B](#)
 Lenkererhöhung. Silber. ø 22 mm. h 20 mm. Bar Riser. Silver. ø 22 mm. h 20 mm. 10 – [LEH.00.039.150/20/S](#)
 Spiegelverlängerung. Schwarz. Lenkerausleger. Mirror Extension. Black. Universal. 10 – [SVL.00.504.101](#)
 QUICK-LOCK GPS-Halter. Schwarz. QUICK-LOCK GPS Mount. Black. 10 – [GPS.00.646.10000/B](#)
 Sturzpad-Kit Frame Slider Kit 10 – [STP.06.590.11000/B](#)
3 Hauptständer. Schwarz. Centerstand. Black. 10 – [HPS.06.173.10000/B](#)

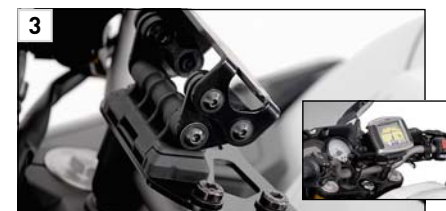

- QUICK-LOCK EVO Tankring. Schwarz. QUICK-LOCK EVO Tankring. Black. 10 – [TRT.00.640.11000/B](#)
 QUICK-LOCK EVO Micro. Schwarz. QUICK-LOCK EVO Micro. Black. 10 – [BC.TRS.00.110.20000](#)
 QUICK-LOCK EVO Daypack. Schwarz. QUICK-LOCK EVO Daypack. Black. 10 – [BC.TRS.00.108.20000](#)
 QUICK-LOCK EVO City. Schwarz. QUICK-LOCK EVO City. Black. 10 – [BC.TRS.00.104.20000](#)
 QUICK-LOCK EVO GS. Schwarz. QUICK-LOCK EVO GS. Black. 10 – [BC.TRS.00.103.20000](#)
 QUICK-LOCK EVO Sport. Schwarz. QUICK-LOCK EVO Sport. Black. 10 – [BC.TRS.00.101.20000](#)
 QUICK-LOCK EVO Elektrik Micro. Schwarz. QUICK-LOCK EVO Electric Micro. Black. 10 – [BC.TRE.00.110.20000](#)
 QUICK-LOCK EVO Elektrik Daypack. Schwarz. QUICK-LOCK EVO Electric Daypack. Black. 10 – [BC.TRE.00.108.20000](#)
 QUICK-LOCK EVO Elektrik City. Schwarz. QUICK-LOCK EVO Electric City. Black. 10 – [BC.TRE.00.104.20000](#)
 QUICK-LOCK EVO Elektrik GS. Schwarz. QUICK-LOCK EVO Electric GS. Black. 10 – [BC.TRE.00.103.20000](#)
 QUICK-LOCK EVO Elektrik Sport. Schwarz. QUICK-LOCK EVO Electric Sport. Black. 10 – [BC.TRE.00.101.20000](#)
 BLAZE® Satteltaschen-Set. Schwarz. BLAZE® Panniers Set. Black. 10 – [BC.HTA.06.740.10300/B](#)
 QUICK-LOCK Kontur-Kofferträger. Schwarz. QUICK-LOCK Profile Side Carrier. Black. 10 – [KFT.06.727.15000/B](#)
 QUICK-LOCK EVO Kofferträger. Schwarz. QUICK-LOCK EVO Side Carrier. Black. 10 – [KFT.06.727.20000/B](#)
 AERO ABS-Seitenkoffersystem. Schwarz. AERO ABS Sidecase System. Black. 10 – [KFT.06.727.60000/B](#)
1 ALU-RACK. Schwarz. ALU-RACK. Black. 10 – [GPT.06.171.10000/B](#)
 Hecktasche Slipstream. Schwarz. Tailbag Slipstream. Black. 10 – [BC.HTA.00.307.10000](#)
 Hecktasche Rearbag. Schwarz. Tailbag Rearbag. Black. 10 – [BC.HTA.00.304.10000](#)
 Hecktasche Rackpack. Schwarz. Tailbag Rackpack. Black. 10 – [BC.HTA.00.305.10000](#)
 Hecktasche Cargobag. Schwarz. Tailbag Cargobag. Black. 10 – [BC.HTA.00.306.10000](#)
 Hecktasche Speedpack®. Schwarz. Tailbag Speedpack®. Black. 10 – [BC.HTA.00.301.10000](#)
 Lenkererhöhung. Schwarz. ø 22 mm. h 20 mm. Bar Riser. Black. ø 22 mm. h 20 mm. 10 – [LEH.00.039.150/20/B](#)
 Lenkererhöhung. Silber. ø 22 mm. h 20 mm. Bar Riser. Silver. ø 22 mm. h 20 mm. 10 – [LEH.00.039.150/20/S](#)
2 Spiegelverlängerung. Schwarz. Kontur-Distanzstück. Mirror Extension. Black. Profile. 10 – [SVL.06.501.11200/B](#)
3 QUICK-LOCK GPS-Halter. Schwarz. QUICK-LOCK GPS Mount. Black. 10 – [GPS.00.646.10000/B](#)
 Sturzpad-Kit Frame Slider Kit 10 – [STP.06.590.11000/B](#)
 Hauptständer. Schwarz. Centerstand. Black. 10 – [HPS.06.173.10000/B](#)





TDM 850

QUICK-LOCK EVO Tankring. Schwarz. QUICK-LOCK EVO Tankring. Black. 91 – 01 [TRT.00.640.11500/B](#)

QUICK-LOCK EVO Micro. Schwarz. QUICK-LOCK EVO Micro. Black. 91 – 01 [BC.TRS.00.110.20000](#)

1 QUICK-LOCK EVO Daypack. Schwarz. QUICK-LOCK EVO Daypack. Black. 91 – 01 [BC.TRS.00.108.20000](#)

QUICK-LOCK EVO City. Schwarz. QUICK-LOCK EVO City. Black. 91 – 01 [BC.TRS.00.104.20000](#)

2 QUICK-LOCK EVO Trial. Schwarz. QUICK-LOCK EVO Trial. Black. 91 – 01 [BC.TRS.00.102.20000](#)

QUICK-LOCK EVO Elektrik Micro. Schwarz. QUICK-LOCK EVO Electric Micro. Black. 91 – 01 [BC.TRE.00.110.20000](#)

QUICK-LOCK EVO Elektrik Daypack. Schwarz. QUICK-LOCK EVO Electric Daypack. Black. 91 – 01 [BC.TRE.00.108.20000](#)

QUICK-LOCK EVO Elektrik City. Schwarz. QUICK-LOCK EVO Electric City. Black. 91 – 01 [BC.TRE.00.104.20000](#)

QUICK-LOCK EVO Elektrik Trial. Schwarz. QUICK-LOCK EVO Electric Trial. Black. 91 – 01 [BC.TRE.00.102.20000](#)

QUICK-LOCK Kofferträger. Schwarz. QUICK-LOCK Side Carrier. Black. 91 – 01 [KFT.06.062.100](#)

3 Hecktasche Slipstream. Schwarz. Tailbag Slipstream. Black. 91 – 01 [BC.HTA.00.307.10000](#)

Hecktasche Jetpack. Schwarz. Tailbag Jetpack. Black. 91 – 01 [BC.HTA.00.303.10000](#)

Hecktasche Rearbag. Schwarz. Tailbag Rearbag. Black. 91 – 01 [BC.HTA.00.304.10000](#)

Hecktasche Cargobag. Schwarz. Tailbag Cargobag. Black. 91 – 01 [BC.HTA.00.306.10000](#)

Hecktasche Speedpack®. Schwarz. Tailbag Speedpack®. Black. 91 – 01 [BC.HTA.00.301.10000](#)

Lenkererhöhung. Schwarz. ø 22 mm. h 30 mm. Bar Riser. Black. ø 22 mm. h 30 mm. 91 – 01 [LEH.00.039.150/30/B](#)

Lenkererhöhung. Silber. ø 22 mm. h 30 mm. Bar Riser. Silver. ø 22 mm. h 30 mm. 91 – 01 [LEH.00.039.150/30/S](#)

Lenkerverlegung. Schwarz. Barback. Black. 91 – 01 [LEH.00.039.152/B](#)

Lenkerverlegung. Silber. Barback. Silver. 91 – 01 [LEH.00.039.152/S](#)

Lenker-Konverter-Set. Schwarz. Bar Converter Set. Black. 91 – 01 [LEH.00.039.168/B](#)

Lenker-Konverter-Set. Silber. Bar Converter Set. Silver. 91 – 01 [LEH.00.039.168/S](#)

Spiegelverlängerung. Schwarz. Lenker ausleger. Mirror Extension. Black. Universal. 91 – 01 [SVL.00.504.101](#)

Schutzbügel. Schwarz. Crashbar. Black. 96 – 01 [SBL.06.120.100](#)

Hauptständer. Schwarz. Centerstand. Black. 91 – 01 [HPS.06.028.100](#)



TDM 900

QUICK-LOCK EVO Tankring. Schwarz. QUICK-LOCK EVO Tankring. Black. 01 – [TRT.00.640.11000/B](#)

QUICK-LOCK EVO Micro. Schwarz. QUICK-LOCK EVO Micro. Black. 01 – [BC.TRS.00.110.20000](#)

QUICK-LOCK EVO Daypack. Schwarz. QUICK-LOCK EVO Daypack. Black. 01 – [BC.TRS.00.108.20000](#)

QUICK-LOCK EVO Trial. Schwarz. QUICK-LOCK EVO Trial. Black. 01 – [BC.TRS.00.102.20000](#)

QUICK-LOCK EVO Elektrik Micro. Schwarz. QUICK-LOCK EVO Electric Micro. Black. 01 – [BC.TRE.00.110.20000](#)



QUICK-LOCK EVO Elektrik Daypack. Schwarz. QUICK-LOCK EVO Electric Daypack. Black. 01 – [BC.TRE.00.108.20000](#)

QUICK-LOCK EVO Elektrik Trial. Schwarz. QUICK-LOCK EVO Electric Trial. Black. 01 – [BC.TRE.00.102.20000](#)

4 QUICK-LOCK EVO Kofferträger. Schwarz. QUICK-LOCK EVO Side Carrier. Black. 01 – [KFT.06.135.20000/B](#)

TraX® EVO Koffersystem. Schwarz. 37/37 l. TraX® EVO Pannier System. Black. 37/37 l. 01 – [KFT.06.135.50000/B](#)

TraX® EVO Koffersystem. Silber. 37/37 l. TraX® EVO Pannier System. Silver. 37/37 l. 01 – [KFT.06.135.50000/S](#)

TraX® EVO Koffersystem. Schwarz. 45/45 l. TraX® EVO Pannier System. Black. 45/45 l. 01 – [KFT.06.135.50100/B](#)

TraX® EVO Koffersystem. Silber. 45/45 l. TraX® EVO Pannier System. Silver. 45/45 l. 01 – [KFT.06.135.50100/S](#)

5 ALU-RACK. Schwarz. ALU-RACK. Black. 01 – [GPT.06.235.100/B](#)

ALU-RACK. Silber. ALU-RACK. Silver. 01 – [GPT.06.235.100/S](#)

Hecktasche Slipstream. Schwarz. Tailbag Slipstream. Black. 01 – [BC.HTA.00.307.10000](#)

Hecktasche Jetpack. Schwarz. Tailbag Jetpack. Black. 01 – [BC.HTA.00.303.10000](#)

Hecktasche Rearbag. Schwarz. Tailbag Rearbag. Black. 01 – [BC.HTA.00.304.10000](#)

Hecktasche Rackpack. Schwarz. Tailbag Rackpack. Black. 01 – [BC.HTA.00.305.10000](#)

Hecktasche Cargobag. Schwarz. Tailbag Cargobag. Black. 01 – [BC.HTA.00.306.10000](#)

Hecktasche Speedpack®. Schwarz. Tailbag Speedpack®. Black. 01 – [BC.HTA.00.301.10000](#)

Nonshock Endurance Lenker. Schwarz. Nonshock Endurance Bar. Black. 01 – 10 [LEN.00.156.10001/B](#)

Lenkererhöhung. Schwarz. ø 22mm. h 30 mm. Bar Riser. Black. ø 22mm. h 30 mm. 01 – 10 [LEH.00.039.150/30/B](#)

Lenkererhöhung. Silber. ø 22mm. h 30 mm. Bar Riser. Silver. ø 22mm. h 30 mm. 01 – 10 [LEH.00.039.150/30/S](#)

Lenkerverlegung. Schwarz. Barback. Black. 01 – 10 [LEH.00.039.152/B](#)

Lenkerverlegung. Silber. Barback. Silver. 01 – 10 [LEH.00.039.152/S](#)

Lenker-Konverter-Set. Schwarz. Bar Converter Set. Black. 01 – 10 [LEH.00.039.168/B](#)

Lenker-Konverter-Set. Silber. Bar Converter Set. Silver. 01 – 10 [LEH.00.039.168/S](#)

Spiegelverlängerung. Schwarz. Lenker ausleger. Mirror Extension. Black. Universal. 01 – [SVL.00.504.101](#)

BB STORM Handprotektoren-Kit. Schwarz. BB STORM Handguard Kit. Black. 03 – 06 [HPR.00.220.10900/B](#)

KOBRA Handprotektoren-Kit. Schwarz. KOBRA Handguard Kit. Black. 03 – 06 [HPR.00.220.20900/B](#)

QUICK-LOCK GPS-Halter. Schwarz. QUICK-LOCK GPS Mount. Black. 06 – [GPS.00.646.10000/B](#)

6 Sturzpad-Kit. Frame Slider Kit. 06 – [STP.06.590.10600/B](#)

7 Schutzbügel. Schwarz. Crashbar. Black. 01 – [SBL.06.119.100](#)

8 Hauptständer. Schwarz. Centerstand. Black. 01 – [HPS.06.118.100](#)





XJ 900 S Diversion

- 1** QUICK-LOCK EVO Tankring, Schwarz. QUICK-LOCK EVO Tankring, Black. 94 - 03 [TRT.00.640.11500/B](#)
 QUICK-LOCK EVO Micro, Schwarz. QUICK-LOCK EVO Micro, Black. 94 - 03 [BC.TRS.00.110.20000](#)
 QUICK-LOCK EVO Daypack, Schwarz. QUICK-LOCK EVO Daypack, Black. 94 - 03 [BC.TRS.00.108.20000](#)
- 2** QUICK-LOCK EVO Engage, Schwarz. QUICK-LOCK EVO Engage, Black. 94 - 03 [BC.TRS.00.107.20000](#)
 QUICK-LOCK EVO City, Schwarz. QUICK-LOCK EVO City, Black. 94 - 03 [BC.TRS.00.104.20000](#)
- 3** QUICK-LOCK EVO Sport, Schwarz. QUICK-LOCK EVO Sport, Black. 94 - 03 [BC.TRS.00.101.20000](#)
 QUICK-LOCK EVO Trial, Schwarz. QUICK-LOCK EVO Trial, Black. 94 - 03 [BC.TRS.00.102.20000](#)
 QUICK-LOCK EVO Elektrik Micro, Schwarz. QUICK-LOCK EVO Electric Micro, Black. 94 - 03 [BC.TRE.00.110.20000](#)
 QUICK-LOCK EVO Elektrik Daypack, Schwarz. QUICK-LOCK EVO Electric Daypack, Black. 94 - 03 [BC.TRE.00.108.20000](#)
 QUICK-LOCK EVO Elektrik Engage, Schwarz. QUICK-LOCK EVO Electric Engage, Black. 94 - 03 [BC.TRE.00.107.20000](#)
 QUICK-LOCK EVO Elektrik City, Schwarz. QUICK-LOCK EVO Electric City, Black. 94 - 03 [BC.TRE.00.104.20000](#)
 QUICK-LOCK EVO Elektrik Sport, Schwarz. QUICK-LOCK EVO Electric Sport, Black. 94 - 03 [BC.TRE.00.101.20000](#)
 QUICK-LOCK EVO Elektrik Trial, Schwarz. QUICK-LOCK EVO Electric Trial, Black. 94 - 03 [BC.TRE.00.102.20000](#)
 QUICK-LOCK Kofferträger, Schwarz. QUICK-LOCK Side Carrier, Black. 94 - 03 [KFT.06.230.100](#)
 ALU-RACK, Schwarz. ALU-RACK, Black. 94 - 03 [GPT.06.242.100/B](#)
 Hecktasche Slipstream, Schwarz. Tailbag Slipstream, Black. 94 - 03 [BC.HTA.00.307.10000](#)
 Hecktasche Rearbag, Schwarz. Tailbag Rearbag, Black. 94 - 03 [BC.HTA.00.304.10000](#)
 Hecktasche Rackpack, Schwarz. Tailbag Rackpack, Black. 94 - 03 [BC.HTA.00.305.10000](#)
 Hecktasche Cargobag, Schwarz. Tailbag Cargobag, Black. 94 - 03 [BC.HTA.00.306.10000](#)
 Hecktasche Racepack®, Schwarz. Tailbag Racepack®, Black. 94 - 03 [BC.HTA.00.302.10000](#)
 Hecktasche Speedpack®, Schwarz. Tailbag Speedpack®, Black. 94 - 03 [BC.HTA.00.301.10000](#)
 Spiegelverlängerung, Schwarz. Lenker ausleger. Mirror Extension, Black, Universal. 94 - 96 [SVL.00.504.101](#)
 Schutzbügel, Schwarz. Crashbar, Black. 94 - 03 [SBL.06.243.100](#)



FZ 1

- 4** QUICK-LOCK EVO Tankring, Schwarz. QUICK-LOCK EVO Tankring, Black. 05 - [TRT.00.640.11000/B](#)
 QUICK-LOCK EVO Micro, Schwarz. QUICK-LOCK EVO Micro, Black. 05 - [BC.TRS.00.110.20000](#)
 QUICK-LOCK EVO Daypack, Schwarz. QUICK-LOCK EVO Daypack, Black. 05 - [BC.TRS.00.108.20000](#)
 QUICK-LOCK EVO City, Schwarz. QUICK-LOCK EVO City, Black. 05 - [BC.TRS.00.104.20000](#)



- QUICK-LOCK EVO Elektrik Micro, Schwarz. QUICK-LOCK EVO Electric Micro, Black. 05 - [BC.TRE.00.110.20000](#)
 QUICK-LOCK EVO Elektrik Daypack, Schwarz. QUICK-LOCK EVO Electric Daypack, Black. 05 - [BC.TRE.00.108.20000](#)
 QUICK-LOCK EVO Elektrik City, Schwarz. QUICK-LOCK EVO Electric City, Black. 05 - [BC.TRE.00.104.20000](#)
- 5** BLAZE® Satteltaschen-Set, Schwarz. BLAZE® Panniers Set, Black. 05 - [BC.HTA.06.740.10300/B](#)
 QUICK-LOCK Kontur-Kofferträger, Schwarz. QUICK-LOCK Profile Side Carrier, Black. 05 - [KFT.06.533.150](#)
 QUICK-LOCK EVO Kofferträger, Schwarz. QUICK-LOCK EVO Side Carrier, Black. 05 - [KFT.06.533.20000/B](#)
 AERO ABS-Seitenkoffersystem, Schwarz. AERO ABS Sidecase System, Black. 05 - [KFT.06.533.60000/B](#)
 ALU-RACK, Schwarz. ALU-RACK, Black. 05 - [GPT.06.541.15000/B](#)
 Hecktasche Slipstream, Schwarz. Tailbag Slipstream, Black. 05 - [BC.HTA.00.307.10000](#)
 Hecktasche Rearbag, Schwarz. Tailbag Rearbag, Black. 05 - [BC.HTA.00.304.10000](#)
 Hecktasche Rackpack, Schwarz. Tailbag Rackpack, Black. 05 - [BC.HTA.00.305.10000](#)
 Hecktasche Cargobag, Schwarz. Tailbag Cargobag, Black. 05 - [BC.HTA.00.306.10000](#)
 Hecktasche Racepack®, Schwarz. Tailbag Racepack®, Black. 05 - [BC.HTA.00.302.10000](#)
 Hecktasche Speedpack®, Schwarz. Tailbag Speedpack®, Black. 05 - [BC.HTA.00.301.10000](#)
 Lenkererhöhung, Schwarz. ø 22 mm. h 30 mm. Bar Riser, Black. ø 22 mm. h 30 mm. 05 - 09 [LEH.00.039.150/30/B](#)
 Lenkererhöhung, Silber. ø 22 mm. h 30 mm. Bar Riser, Silver. ø 22 mm. h 30 mm. 05 - 09 [LEH.00.039.150/30/S](#)
 Lenkerverlegung, Schwarz. Barback, Black. 05 - 09 [LEH.00.039.152/B](#)
 Lenkerverlegung, Silber. Barback, Silver. 05 - 09 [LEH.00.039.152/S](#)
 Lenker-Konverter-Set, Schwarz. Bar Converter Set, Black. 05 - 09 [LEH.00.039.168/B](#)
 Lenker-Konverter-Set, Silber. Bar Converter Set, Silver. 05 - 09 [LEH.00.039.168/S](#)
 Spiegelverlängerung, Schwarz. Lenker ausleger. Mirror Extension, Black, Universal. 05 - [SVL.00.504.101](#)
- 6** QUICK-LOCK GPS-Halter, Schwarz. QUICK-LOCK GPS Mount, Black. 05 - [GPS.06.646.10000/B](#)
 Nonshock GPS-Halter Cockpit, Schwarz. Nonshock Cockpit GPS Mount, Black. 05 - [GPS.06.677.10000/B](#)
 Sturzpad-Kit. Frame Slider Kit. 05 - [STP.06.590.10000/B](#)
 Schutzbügel, Schwarz. Crashbar, Black. 05 - [SBL.06.542.100](#)
 Hauptständer, Schwarz. Centerstand, Black. 05 - [HPS.06.499.100](#)





- QUICK-LOCK EVO Tankring. Schwarz. QUICK-LOCK EVO Tankring. Black. 05 – [TRT.00.640.11000/B](#)
 QUICK-LOCK EVO Micro. Schwarz. QUICK-LOCK EVO Micro. Black. 05 – [BC.TRS.00.110.20000](#)
 QUICK-LOCK EVO Daypack. Schwarz. QUICK-LOCK EVO Daypack. Black. 05 – [BC.TRS.00.108.20000](#)
 QUICK-LOCK EVO City. Schwarz. QUICK-LOCK EVO City. Black. 05 – [BC.TRS.00.104.20000](#)
 QUICK-LOCK EVO Elektrik Micro. Schwarz. QUICK-LOCK EVO Electric Micro. Black. 05 – [BC.TRE.00.110.20000](#)
 QUICK-LOCK EVO Elektrik Daypack. Schwarz. QUICK-LOCK EVO Electric Daypack. Black. 05 – [BC.TRE.00.108.20000](#)
 QUICK-LOCK EVO Elektrik City. Schwarz. QUICK-LOCK EVO Electric City. Black. 05 – [BC.TRE.00.104.20000](#)
 BLAZE® Satteltaschen-Set. Schwarz. BLAZE® Panniers Set. Black. 08 – [BC.HTA.06.740.10300/B](#)
- 1** QUICK-LOCK Kontur-Kofferträger. Schwarz. QUICK-LOCK Profile Side Carrier. Black. 05 – 07 [KFT.06.533.150](#)
 QUICK-LOCK EVO Kofferträger. Schwarz. QUICK-LOCK EVO Side Carrier. Black. 05 – [KFT.06.533.20000/B](#)
 AERO ABS-Seitenkoffersystem. Schwarz. AERO ABS Sidecase System. Black. 05 – [KFT.06.533.60000/B](#)
- 2** ALU-RACK. Schwarz. ALU-RACK. Black. 05 – 07 [GPT.06.541.15000/B](#)
 Hecktasche Slipstream. Schwarz. Tailbag Slipstream. Black. 05 – [BC.HTA.00.307.10000](#)
3 Hecktasche Rearbag. Schwarz. Tailbag Rearbag. Black. 05 – [BC.HTA.00.304.10000](#)
 Hecktasche Rackpack. Schwarz. Tailbag Rackpack. Black. 05 – [BC.HTA.00.305.10000](#)
 Hecktasche Cargobag. Schwarz. Tailbag Cargobag. Black. 05 – [BC.HTA.00.306.10000](#)
 Hecktasche Speedpack®. Schwarz. Tailbag Speedpack®. Black. 08 – [BC.HTA.00.301.10000](#)
 Lenkererhöhung. Schwarz. ø 22 mm. h 30 mm. Bar Riser. Black. ø 22 mm. h 30 mm. 05 – 09 [LEH.00.039.150/30/B](#)
 Lenkererhöhung. Silber. ø 22 mm. h 30 mm. Bar Riser. Silver. ø 22 mm. h 30 mm. 05 – 09 [LEH.00.039.150/30/S](#)
 Lenkerverlegung. Schwarz. Barback. Black. 05 – 09 [LEH.00.039.152/B](#)
 Lenkerverlegung. Silber. Barback. Silver. 05 – 09 [LEH.00.039.152/S](#)



- Lenker-Konverter-Set. Schwarz. Bar Converter Set. Black. 05 – 09 [LEH.00.039.168/B](#)
 Lenker-Konverter-Set. Silber. Bar Converter Set. Silver. 05 – 09 [LEH.00.039.168/S](#)
 QUICK-LOCK GPS-Halter. Schwarz. QUICK-LOCK GPS Mount. Black. 05 – 07 [GPS.06.646.10000/B](#)
 Nonshock GPS-Halter Cockpit. Schwarz. Nonshock Cockpit GPS Mount. Black. 05 – 07 [GPS.06.677.10000/B](#)
 Spiegelverlängerung. Schwarz. Kontur-Distanzstück. Mirror Extension. Black. Profile. 05 – 07 [SVL.06.501.10900/B](#)
 Sturzpad-Kit Frame Slider Kit 05 – [STP.06.590.10000/B](#)
- 4** Schutzbügel. Schwarz. Crashbar. Black. 05 – 07 [SBL.06.542.100](#)
 Hauptständer. Schwarz. Centerstand. Black. 05 – [HPS.06.499.100](#)
- FZS 1000 Fazer**
 QUICK-LOCK EVO Tankring. Schwarz. QUICK-LOCK EVO Tankring. Black. 00 – 05 [TRT.00.640.11000/B](#)
 QUICK-LOCK EVO Micro. Schwarz. QUICK-LOCK EVO Micro. Black. 00 – 05 [BC.TRS.00.110.20000](#)
 QUICK-LOCK EVO Daypack. Schwarz. QUICK-LOCK EVO Daypack. Black. 00 – 05 [BC.TRS.00.108.20000](#)
 QUICK-LOCK EVO Sport. Schwarz. QUICK-LOCK EVO Sport. Black. 00 – 05 [BC.TRS.00.101.20000](#)
 QUICK-LOCK EVO Elektrik Micro. Schwarz. QUICK-LOCK EVO Electric Micro. Black. 00 – 05 [BC.TRE.00.110.20000](#)
 QUICK-LOCK EVO Elektrik Daypack. Schwarz. QUICK-LOCK EVO Electric Daypack. Black. 00 – 05 [BC.TRE.00.108.20000](#)
 QUICK-LOCK EVO Elektrik Sport. Schwarz. QUICK-LOCK EVO Electric Sport. Black. 00 – 05 [BC.TRE.00.101.20000](#)
 QUICK-LOCK Kofferträger. Schwarz. QUICK-LOCK Side Carrier. Black. 00 – 04 [KFT.06.095.100](#)
- 5** ALU-RACK. Schwarz. ALU-RACK. Black. 00 – 04 [GPT.06.238.100/B](#)
6 Hecktasche Slipstream. Schwarz. Tailbag Slipstream. Black. 00 – 05 [BC.HTA.00.307.10000](#)
 Hecktasche Rearbag. Schwarz. Tailbag Rearbag. Black. 00 – 05 [BC.HTA.00.304.10000](#)
 Hecktasche Rackpack. Schwarz. Tailbag Rackpack. Black. 00 – 05 [BC.HTA.00.305.10000](#)
 Hecktasche Cargobag. Schwarz. Tailbag Cargobag. Black. 00 – 05 [BC.HTA.00.306.10000](#)
 Hecktasche Speedpack®. Schwarz. Tailbag Speedpack®. Black. 00 – 05 [BC.HTA.00.301.10000](#)
 Lenkererhöhung. Schwarz. ø 22 mm. h 30 mm. Bar Riser. Black. ø 22 mm. h 30 mm. 00 – 05 [LEH.00.039.150/30/B](#)
 Lenkererhöhung. Silber. ø 22 mm. h 30 mm. Bar Riser. Silver. ø 22 mm. h 30 mm. 00 – 05 [LEH.00.039.150/30/S](#)
 Lenkerverlegung. Schwarz. Barback. Black. 00 – 05 [LEH.00.039.152/B](#)
 Lenkerverlegung. Silber. Barback. Silver. 00 – 05 [LEH.00.039.152/S](#)
 Lenker-Konverter-Set. Schwarz. Bar Converter Set. Black. 00 – 05 [LEH.00.039.168/B](#)
 Lenker-Konverter-Set. Silber. Bar Converter Set. Silver. 00 – 05 [LEH.00.039.168/S](#)
 Spiegelverlängerung. Schwarz. Kontur-Distanzstück. Mirror Extension. Black. Profile. 00 – 05 [SVL.06.501.104](#)
 Schutzbügel. Schwarz. Crashbar. Black. 00 – 04 [SBL.06.318.100/B](#)
 Schutzbügel. Silber. Crashbar. Silver. 00 – 04 [SBL.06.318.100/S](#)





- 1** QUICK-LOCK EVO Tankring. Schwarz. QUICK-LOCK EVO Tankring. Black. 97 – **TRT.00.640.11000/B**
 QUICK-LOCK EVO Micro. Schwarz. QUICK-LOCK EVO Micro. Black. 97 – **BC.TRS.00.110.20000**
 QUICK-LOCK EVO Daypack. Schwarz. QUICK-LOCK EVO Daypack. Black. 97 – **BC.TRS.00.108.20000**
 QUICK-LOCK EVO Sport. Schwarz. QUICK-LOCK EVO Sport. Black. 97 – **BC.TRS.00.101.20000**
 QUICK-LOCK EVO Elektrik Micro. Schwarz. QUICK-LOCK EVO Electric Micro. Black. 97 – **BC.TRE.00.110.20000**
 QUICK-LOCK EVO Elektrik Daypack. Schwarz. QUICK-LOCK EVO Electric Daypack. Black. 97 – **BC.TRE.00.108.20000**
 QUICK-LOCK EVO Elektrik Sport. Schwarz. QUICK-LOCK EVO Electric Sport. Black. 97 – **BC.TRE.00.101.20000**
 BLAZE® Satteltaschen-Set. Schwarz. BLAZE® Panniers Set. Black. 07 – 08 **BC.HTA.06.740.10600/B**
- 2** BLAZE® Satteltaschen-Set. Schwarz. BLAZE® Panniers Set. Black. 09 – **BC.HTA.06.740.10000/B**
 Hecktasche Slipstream. Schwarz. Tailbag Slipstream. Black. 97 – **BC.HTA.00.307.10000**
 Hecktasche Rearbag. Schwarz. Tailbag Rearbag. Black. 97 – **BC.HTA.00.304.10000**
 Hecktasche Cargobag. Schwarz. Tailbag Cargobag. Black. 97 – **BC.HTA.00.306.10000**
 Hecktasche Racepack®. Schwarz. Tailbag Racepack®. Black. 97 – **BC.HTA.00.302.10000**
 Hecktasche Speedpack®. Schwarz. Tailbag Speedpack®. Black. 97 – **BC.HTA.00.301.10000**
 Spiegelverlängerung. Schwarz. Kontur-Distanzstück. Mirror Extension. Black. Profile. 97 – 01 **SVL.06.501.103**
 Spiegelverlängerung. Schwarz. Kontur-Distanzstück. Mirror Extension. Black. Profile. 01 – 06 **SVL.06.501.102**
 Spiegelverlängerung. Schwarz. Kontur-Distanzstück. Mirror Extension. Black. Profile. 09 – **SVL.06.501.10500/B**
 Sturzpad-Kit Frame Slider Kit 09 – **STP.06.590.10400/B**



- QUICK-LOCK EVO Tankring. Schwarz. QUICK-LOCK EVO Tankring. Black. 02 – 05 **TRT.00.640.11600/B**
- 1** QUICK-LOCK EVO Micro. Schwarz. QUICK-LOCK EVO Micro. Black. 02 – 05 **BC.TRS.00.110.20000**
 QUICK-LOCK EVO Daypack. Schwarz. QUICK-LOCK EVO Daypack. Black. 02 – 05 **BC.TRS.00.108.20000**
- 2** QUICK-LOCK EVO Engage. Schwarz. QUICK-LOCK EVO Engage. Black. 02 – 05 **BC.TRS.00.107.20000**
 QUICK-LOCK EVO Trial. Schwarz. QUICK-LOCK EVO Trial. Black. 02 – 05 **BC.TRS.00.102.20000**
 QUICK-LOCK EVO Elektrik Micro. Schwarz. QUICK-LOCK EVO Electric Micro. Black. 02 – 05 **BC.TRE.00.110.20000**
 QUICK-LOCK EVO Elektrik Daypack. Schwarz. QUICK-LOCK EVO Electric Daypack. Black. 02 – 05 **BC.TRE.00.108.20000**
 QUICK-LOCK EVO Elektrik Engage. Schwarz. QUICK-LOCK EVO Electric Engage. Black. 02 – 05 **BC.TRE.00.107.20000**
 QUICK-LOCK EVO Elektrik Trial. Schwarz. QUICK-LOCK EVO Electric Trial. Black. 02 – 05 **BC.TRE.00.102.20000**
 QUICK-LOCK Kofferträger. Schwarz. QUICK-LOCK Side Carrier. Black. 02 – 05 **KFT.06.228.100**
 ALU-RACK. Schwarz. ALU-RACK. Black. 02 – 05 **GPT.06.234.100/B**
- 3** ALU-RACK. Silber. ALU-RACK. Silver. 02 – 05 **GPT.06.234.100/S**
 Hecktasche Slipstream. Schwarz. Tailbag Slipstream. Black. 02 – 05 **BC.HTA.00.307.10000**
 Hecktasche Rearbag. Schwarz. Tailbag Rearbag. Black. 02 – 05 **BC.HTA.00.304.10000**
 Hecktasche Rackpack. Schwarz. Tailbag Rackpack. Black. 02 – 05 **BC.HTA.00.305.10000**
- 4** Hecktasche Cargobag. Schwarz. Tailbag Cargobag. Black. 02 – 05 **BC.HTA.00.306.10000**
 Hecktasche Racepack®. Schwarz. Tailbag Racepack®. Black. 02 – 05 **BC.HTA.00.302.10000**
 Hecktasche Speedpack®. Schwarz. Tailbag Speedpack®. Black. 02 – 05 **BC.HTA.00.301.10000**
 Lenkererhöhung. Schwarz. ø 22 mm. h 30 mm. Bar Riser. Black. ø 22 mm. h 30 mm. 02 – 05 **LEH.00.039.150/30/B**
 Lenkererhöhung. Silber. ø 22 mm. h 30 mm. Bar Riser. Silver. ø 22 mm. h 30 mm. 02 – 05 **LEH.00.039.150/30/S**
 Lenkerverlegung. Schwarz. Barback. Black. 02 – 05 **LEH.00.039.152/B**
 Lenkerverlegung. Silber. Barback. Silver. 02 – 05 **LEH.00.039.152/S**
 Lenker-Konverter-Set. Schwarz. Bar Converter Set. Black. 02 – 05 **LEH.00.039.168/B**
 Lenker-Konverter-Set. Silber. Bar Converter Set. Silver. 02 – 05 **LEH.00.039.168/S**
 Spiegelverlängerung. Schwarz. Lenker ausleger. Mirror Extension. Black. Universal. 04 – 05 **SVL.00.504.101**
 Spiegelverlängerung. Schwarz. Lenker ausleger. Mirror Extension. Black. Universal. 02 – 05 **SVL.00.504.102**
 Hauptständer. Schwarz. Centerstand. Black. 02 – 05 **HPS.06.221.100**



YAMAHA

XJR 1200 / XT 1200 Z Super Ténéré



XJR 1200

QUICK-LOCK EVO Tankring, Schwarz. QUICK-LOCK EVO Tankring, Black. 95 – 99 TRT.00.640.11500/B

1 QUICK-LOCK EVO Micro, Schwarz. QUICK-LOCK EVO Micro, Black. 95 – 99 BC.TRS.00.110.20000

QUICK-LOCK EVO Daypack, Schwarz. QUICK-LOCK EVO Daypack, Black. 95 – 99 BC.TRS.00.108.20000

2 QUICK-LOCK EVO Sport, Schwarz. QUICK-LOCK EVO Sport, Black. 95 – 99 BC.TRS.00.101.20000

QUICK-LOCK EVO Trial, Schwarz. QUICK-LOCK EVO Trial, Black. 95 – 99 BC.TRS.00.102.20000

QUICK-LOCK EVO Elektrik Micro, Schwarz. QUICK-LOCK EVO Electric Micro, Black. 95 – 99 BC.TRE.00.110.20000

QUICK-LOCK EVO Elektrik Daypack, Schwarz. QUICK-LOCK EVO Electric Daypack, Black. 95 – 99 BC.TRE.00.108.20000

QUICK-LOCK EVO Elektrik Sport, Schwarz. QUICK-LOCK EVO Electric Sport, Black. 95 – 99 BC.TRE.00.101.20000

QUICK-LOCK EVO Elektrik Trial, Schwarz. QUICK-LOCK EVO Electric Trial, Black. 95 – 99 BC.TRE.00.102.20000

QUICK-LOCK EVO Kofferträger, Schwarz. QUICK-LOCK EVO Side Carrier, Black. 95 – 99 KFT.06.435.20000/B

3 ALU-RACK, Schwarz. ALU-RACK, Black. 95 – 99 GPT.06.236.15000/B

Hecktasche Sliptream, Schwarz. Tailbag Sliptream, Black. 95 – 99 BC.HTA.00.307.10000

Hecktasche Rearbag, Schwarz. Tailbag Rearbag, Black. 95 – 99 BC.HTA.00.304.10000

Hecktasche Rackpack, Schwarz. Tailbag Rackpack, Black. 95 – 99 BC.HTA.00.305.10000

4 Hecktasche Cargobag, Schwarz. Tailbag Cargobag, Black. 95 – 99 BC.HTA.00.306.10000

Hecktasche Racepack®, Schwarz. Tailbag Racepack®, Black. 95 – 99 BC.HTA.00.302.10000

Hecktasche Speedpack®, Schwarz. Tailbag Speedpack®, Black. 95 – 99 BC.HTA.00.301.10000

Lenkererhöhung, Schwarz. ø 22 mm. h 30 mm. Bar Riser, Black. ø 22 mm. h 30 mm. 95 – 99 LEH.00.039.150/30/B

Lenkererhöhung, Silber. ø 22 mm. h 30 mm. Bar Riser, Silver. ø 22 mm. h 30 mm. 95 – 99 LEH.00.039.150/30/S

Lenkerverlegung, Schwarz. Barback, Black. 95 – 99 LEH.00.039.152/B

Lenkerverlegung, Silber. Barback, Silver. 95 – 99 LEH.00.039.152/S

Lenker-Konverter-Set, Schwarz. Bar Converter Set, Black. 95 – 99 LEH.00.039.168/B

Lenker-Konverter-Set, Silber. Bar Converter Set, Silver. 95 – 99 LEH.00.039.168/S

Spiegelverlängerung, Schwarz. Lenker ausleger. Mirror Extension, Black, Universal. 95 – 99 SVL.00.504.101

Schutzbügel, Schwarz. Crashbar, Black. 95 – 99 SBL.06.343.100



XT 1200 Z Super Ténéré

QUICK-LOCK EVO Tankring, Schwarz. QUICK-LOCK EVO Tankring, Black. 10 – TRT.00.640.11000/B

QUICK-LOCK EVO Micro, Schwarz. QUICK-LOCK EVO Micro, Black. 10 – BC.TRS.00.110.20000

QUICK-LOCK EVO Daypack, Schwarz. QUICK-LOCK EVO Daypack, Black. 10 – BC.TRS.00.108.20000

QUICK-LOCK EVO City, Schwarz. QUICK-LOCK EVO City, Black. 10 – BC.TRS.00.104.20000

QUICK-LOCK EVO GS, Schwarz. QUICK-LOCK EVO GS, Black. 10 – BC.TRS.00.103.20000



QUICK-LOCK EVO Elektrik Micro, Schwarz. QUICK-LOCK EVO Electric Micro, Black. 10 – BC.TRE.00.110.20000

QUICK-LOCK EVO Elektrik Daypack, Schwarz. QUICK-LOCK EVO Electric Daypack, Black. 10 – BC.TRE.00.108.20000

QUICK-LOCK EVO Elektrik City, Schwarz. QUICK-LOCK EVO Electric City, Black. 10 – BC.TRE.00.104.20000

QUICK-LOCK EVO Elektrik GS, Schwarz. QUICK-LOCK EVO Electric GS, Black. 10 – BC.TRE.00.103.20000

5 QUICK-LOCK EVO Kofferträger, Schwarz. QUICK-LOCK EVO Side Carrier, Black. 10 – KFT.06.145.20001/B

6 TraX® EVO Koffersystem, Schwarz. 37/45 l. TraX® EVO Pannier System, Black. 37/45 l. 10 – KFT.06.145.50000/B

TraX® EVO Koffersystem, Silber. 37/45 l. TraX® EVO Pannier System, Silver. 37/45 l. 10 – KFT.06.145.50000/S

ALU-RACK, Schwarz. ALU-RACK, Black. 10 – GPT.06.148.15000/B

7 ALU-RACK, Silber. ALU-RACK, Silver. 10 – GPT.06.148.15000/S

STEEL-RACK, Schwarz. STEEL-RACK, Black. 10 – GPT.06.148.20002/B

Hecktasche Sliptream, Schwarz. Tailbag Sliptream, Black. 10 – BC.HTA.00.307.10000

Hecktasche Jetpack, Schwarz. Tailbag Jetpack, Black. 10 – BC.HTA.00.303.10000

Hecktasche Rearbag, Schwarz. Tailbag Rearbag, Black. 10 – BC.HTA.00.304.10000

Hecktasche Rackpack, Schwarz. Tailbag Rackpack, Black. 10 – BC.HTA.00.305.10000

Hecktasche Cargobag, Schwarz. Tailbag Cargobag, Black. 10 – BC.HTA.00.306.10000

Hecktasche Speedpack®, Schwarz. Tailbag Speedpack®, Black. 10 – BC.HTA.00.301.10000

Nonshock Endurance Lenker, Schwarz. Nonshock Endurance Bar, Black. 10 – LEN.06.156.16000/B

Lenkererhöhung, Schwarz. ø 28 mm. h 25 mm. Bar Riser, Black. ø 28 mm. h 25 mm. 10 – LEH.06.039.10100/S

BB STORM Handprotektoren-Kit, Schwarz. BB STORM Handguard Kit, Black. 10 – HPR.00.220.10800/B

KOBRA Handprotektoren-Kit, Schwarz. KOBRA Handguard Kit, Black. 10 – HPR.00.220.20800/B

Spiegelverlängerung, Schwarz. Lenker ausleger. Mirror Extension, Black, Universal. 10 – SVL.00.504.101

QUICK-LOCK GPS-Halter, Schwarz. QUICK-LOCK GPS Mount, Black. 10 – GPS.06.646.10100/B

HAWK Scheinwerferhalter-Set, Schwarz. HAWK Light Mount Set, Black. 10 – NSW.06.004.10100/B

HAWK Nebelscheinwerfer-Set, Schwarz. HAWK Fog Light Set, Black. 10 – NSW.06.004.50100/B

HAWK Nebelscheinwerfer-Set, Silber. HAWK Fog Light Set, Silver. 10 – NSW.06.004.50100/S

Vorderachs-Sturzpadd-Kit, Schwarz. Front Axle Slider Kit, Black. 10 – STP.06.176.10000/B

8 Hinterachs-Sturzpadd-Kit, Schwarz. Rear Axle Slider Kit, Black. 10 – STP.06.176.10100/B

Schutzbügel, Schwarz. Crashbar, Black. 10 – SBL.06.162.10000/B

Fußrasten-Kit, Silber. Footrest Kit, Silver. 10 – FRS.06.011.10000/S

9 Motorschutz, Silber. Engine Guard, Silver. 10 – MSS.06.150.10000/S



FJR 1300 / XJR 1300



FJR 1300

QUICK-LOCK EVO Tankring. Schwarz. QUICK-LOCK EVO Tankring. Black. 00 – **TRT.00.640.11000/B**

QUICK-LOCK EVO Micro. Schwarz. QUICK-LOCK EVO Micro. Black. 00 – **BC.TRS.00.110.20000**

QUICK-LOCK EVO Daypack. Schwarz. QUICK-LOCK EVO Daypack. Black. 00 – **BC.TRS.00.108.20000**

QUICK-LOCK EVO Trial. Schwarz. QUICK-LOCK EVO Trial. Black. 00 – **BC.TRS.00.102.20000**

QUICK-LOCK Kofferträger. Schwarz. QUICK-LOCK Side Carrier. Black. 00 – 05 **KFT.06.098.100**

ALU-RACK. Silber. ALU-RACK. Silver. 00 – 05 **GPT.06.354.100/S**

ALU-RACK. Silber. ALU-RACK. Silver. 06 – 07 **GPT.06.498.100/S**

Hecktasche Slipstream. Schwarz. Tailbag Slipstream. Black. 00 – **BC.HTA.00.307.10000**

Hecktasche Rearbag. Schwarz. Tailbag Rearbag. Black. 00 – **BC.HTA.00.304.10000**

Hecktasche Rackpack. Schwarz. Tailbag Rackpack. Black. 00 – **BC.HTA.00.305.10000**

Hecktasche Cargobag. Schwarz. Tailbag Cargobag. Black. 00 – **BC.HTA.00.306.10000**

Hecktasche Speedpack®. Schwarz. Tailbag Speedpack®. Black. 00 – **BC.HTA.00.301.10000**

Lenkererhöhung. Silber. ø 22 mm. h 25 mm. Bar Riser. Silver. ø 22 mm. h 25 mm. 00 – 05 **LEH.06.039.114/S**

Spiegelverlängerung. Schwarz. Kontur-Distanzstück. Mirror Extension. Black. Profile. 00 – 05 **SVL.06.501.101**

Spiegelverlängerung. Schwarz. Kontur-Distanzstück. Mirror Extension. Black. Profile. 06 – 12 **SVL.06.501.11000/B**

1 Spiegelverlängerung. Schwarz. Kontur-Distanzstück. Mirror Extension. Black. Profile. 13 – **SVL.06.501.11000/B**

2 QUICK-LOCK GPS-Halter. Schwarz. QUICK-LOCK GPS Mount. Black. 04 – **GPS.06.646.10200/B**

3 Sturzpad-Kit. Schwarz. Frame Slider Kit. Black. 06 – **STP.06.590.10301/B**



XJR 1300

QUICK-LOCK EVO Tankring. Schwarz. QUICK-LOCK EVO Tankring. Black. 98 – **TRT.00.640.11000/B**

QUICK-LOCK EVO Micro. Schwarz. QUICK-LOCK EVO Micro. Black. 98 – **BC.TRS.00.110.20000**

QUICK-LOCK EVO Daypack. Schwarz. QUICK-LOCK EVO Daypack. Black. 98 – **BC.TRS.00.108.20000**

QUICK-LOCK EVO Sport. Schwarz. QUICK-LOCK EVO Sport. Black. 98 – **BC.TRS.00.101.20000**

QUICK-LOCK EVO Trial. Schwarz. QUICK-LOCK EVO Trial. Black. 98 – **BC.TRS.00.102.20000**

QUICK-LOCK EVO Elektrik Micro. Schwarz. QUICK-LOCK EVO Electric Micro. Black. 98 – **BC.TRE.00.110.20000**

QUICK-LOCK EVO Elektrik Daypack. Schwarz. QUICK-LOCK EVO Electric Daypack. Black. 98 – **BC.TRE.00.108.20000**

QUICK-LOCK EVO Elektrik Sport. Schwarz. QUICK-LOCK EVO Electric Sport. Black. 98 – **BC.TRE.00.101.20000**

QUICK-LOCK EVO Elektrik Trial. Schwarz. QUICK-LOCK EVO Electric Trial. Black. 98 – **BC.TRE.00.102.20000**

QUICK-LOCK EVO Kofferträger. Schwarz. QUICK-LOCK EVO Side Carrier. Black. 98 – **KFT.06.435.20000/B**

4 ALU-RACK. Schwarz. ALU-RACK. Black. 98 – **GPT.06.236.15000/B**

Hecktasche Slipstream. Schwarz. Tailbag Slipstream. Black. 98 – **BC.HTA.00.307.10000**

Hecktasche Rearbag. Schwarz. Tailbag Rearbag. Black. 98 – **BC.HTA.00.304.10000**

Hecktasche Rackpack. Schwarz. Tailbag Rackpack. Black. 98 – **BC.HTA.00.305.10000**

Hecktasche Cargobag. Schwarz. Tailbag Cargobag. Black. 98 – **BC.HTA.00.306.10000**



XJR 1300 / MT-01



Hecktasche Racepack®. Schwarz. Tailbag Racepack®. Black. 98 – **BC.HTA.00.302.10000**

Hecktasche Speedpack®. Schwarz. Tailbag Speedpack®. Black. 98 – **BC.HTA.00.301.10000**

Nonshock Endurance Lenker. Schwarz. Nonshock Endurance Bar. Black. 06 – **LEN.00.156.10001/B**

Lenkererhöhung. Schwarz. ø 22 mm. h 30 mm. Bar Riser. Black. ø 22 mm. h 30 mm. 98 – 09 **LEH.00.039.150/30/B**

Lenkererhöhung. Silber. ø 22 mm. h 30 mm. Bar Riser. Silver. ø 22 mm. h 30 mm. 98 – 09 **LEH.00.039.150/30/S**

Lenkerverlegung. Schwarz. Barback. Black. 98 – 09 **LEH.00.039.152/B**

Lenkerverlegung. Silber. Barback. Silver. 98 – 09 **LEH.00.039.152/S**

Lenker-Konverter-Set. Schwarz. Bar Converter Set. Black. 98 – 09 **LEH.00.039.168/B**

Lenker-Konverter-Set. Silber. Bar Converter Set. Silver. 98 – 09 **LEH.00.039.168/S**

BB STORM Handprotektoren-Kit. Schwarz. BB STORM Handguard Kit. Black. 06 – 11 **HPR.00.220.10900/B**

KOBRA Handprotektoren-Kit. Schwarz. KOBRA Handguard Kit. Black. 06 – 11 **HPR.00.220.20900/B**

Spiegelverlängerung. Schwarz. Lenker ausleger. Mirror Extension. Black. Universal. 98 – **SVL.00.504.101**

QUICK-LOCK GPS-Halter. Schwarz. QUICK-LOCK GPS Mount. Black. 06 – **GPS.06.646.10400/B**

QUICK-LOCK GPS-Halter. Schwarz. QUICK-LOCK GPS Mount. Black. 07 – **GPS.06.646.10401/B**

5 Nonshock GPS-Halter Cockpit. Schwarz. Nonshock Cockpit GPS Mount. Black. 06 – **GPS.06.715.10000/B**

6 Schutzbügel. Schwarz. Crashbar. Black. 98 – **SBL.06.343.100**

MT-01

QUICK-LOCK EVO Tankring. Schwarz. QUICK-LOCK EVO Tankring. Black. 04 – **TRT.00.640.11000/B**

QUICK-LOCK EVO Micro. Schwarz. QUICK-LOCK EVO Micro. Black. 04 – **BC.TRS.00.110.20000**

QUICK-LOCK EVO Daypack. Schwarz. QUICK-LOCK EVO Daypack. Black. 04 – **BC.TRS.00.108.20000**

QUICK-LOCK EVO City. Schwarz. QUICK-LOCK EVO City. Black. 04 – **BC.TRS.00.104.20000**

QUICK-LOCK EVO GS. Schwarz. QUICK-LOCK EVO GS. Black. 04 – **BC.TRS.00.103.20000**

QUICK-LOCK EVO Elektrik Micro. Schwarz. QUICK-LOCK EVO Electric Micro. Black. 04 – **BC.TRE.00.110.20000**

QUICK-LOCK EVO Elektrik Daypack. Schwarz. QUICK-LOCK EVO Electric Daypack. Black. 04 – **BC.TRE.00.108.20000**

QUICK-LOCK EVO Elektrik City. Schwarz. QUICK-LOCK EVO Electric City. Black. 04 – **BC.TRE.00.104.20000**

QUICK-LOCK EVO Elektrik GS. Schwarz. QUICK-LOCK EVO Electric GS. Black. 04 – **BC.TRE.00.103.20000**

Hecktasche Slipstream. Schwarz. Tailbag Slipstream. Black. 04 – **BC.HTA.00.307.10000**

Hecktasche Rearbag. Schwarz. Tailbag Rearbag. Black. 04 – **BC.HTA.00.304.10000**

Lenkeraufnahme. Schwarz. Bar Mount. Black. 06 – 09 **LEH.00.039.16300.01/B**

Lenkeraufnahme. Silber. Bar Mount. Silver. 06 – 09 **LEH.00.039.16300.01/S**

QUICK-LOCK GPS-Halter. Schwarz. QUICK-LOCK GPS Mount. Black. 06 – **GPS.06.646.10300/B**

Nonshock GPS-Halter Cockpit. Schwarz. Nonshock Cockpit GPS Mount. Black. 06 – **GPS.06.668.10000/B**

Spiegelverlängerung. Schwarz. Lenker ausleger. Mirror Extension. Black. Universal. 04 – **SVL.00.504.101**

Schutzbügel. Schwarz. Crashbar. Black. 04 – **SBL.06.396.100**

7 Hauptständer. Schwarz. Centerstand. Black. 04 – **HPS.06.390.100**





SW-MOTECH
BAGS-CONNECTION
engineering for motorbikes

SW-MOTECH GmbH & Co. KG

BAGS-CONNECTION GmbH & Co. KG

Ernteweg 8/10 . 35282 Rauschenberg . Germany

phone +49 6425 8168-050 . fax +49 6425 8168-10

info@sw-bc.com . www.sw-bc.com

Händler / Dealer