


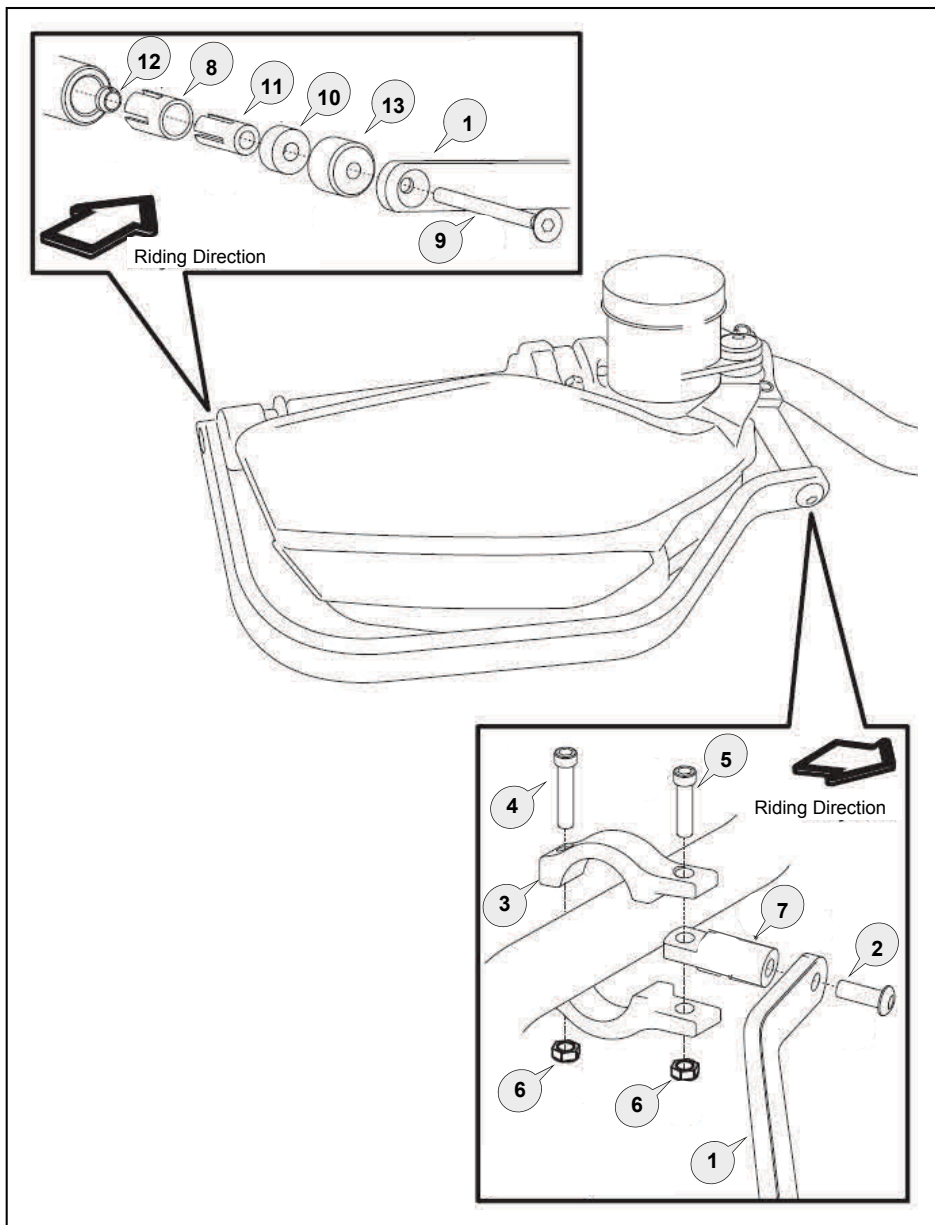

NOTE:

Barkbusters Lever Guard is to be mounted in conjunction with original Ducati plastic handguards. When mounted correctly, indicators should not be obscured.

Important Fitting Procedure

Remove original Ducati handlebar end caps.

Installation is shown for the right side. Repeat for left side with applicable parts. Loosely assemble clamp to the handlebar (see diagram).

Attach the handguard backbone with applicable parts to the handlebar end and also to the clamp.

Tighten all bolts in the following order using recommended torque specifications over page.

Tighten bolt (9) into the handlebar end.


Tighten bolt (2) through the aluminium bar (1) to the clamp connector (7) of the clamp assembly.

Tighten bolt (5) to solidly lock the clamp connector (7) between the clamp saddles (3).

Tighten bolt (4) to secure the clamp assembly firmly to the handlebar.

Note: The clamp is designed to allow the nut on bolt (5) to pull into the recessed hole. This eliminates the need for a wrench after the bolt starts to tighten.

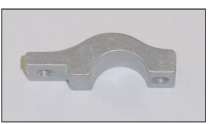

1 Aluminium Bar (Black)  PN: BAR-LG13 Pcs. 1 Left & 1 Right	2 Button Head Bolt 25mm  PN: M8x25BHCSZP Pcs. 2	3 Clamp Saddle  PN: CS-STD Pcs. 4	4 Socket Head Bolt 30mm  PN: M6x30SHCSZP Pcs. 2	5 Socket Head Bolt 25mm  PN: M6x25SHCSZP Pcs. 2	6 Nylock Nut 6mm  PN: M6LN Pcs. 4	7 Clamp Connector  PN: CP1 Pcs. 2	8 Collett 16mm  PN: COLLET14-16 Pcs. 2
9 Flat Head Bolt 70mm  PN: M8x70FHCSZP Pcs. 2	10 Spacer 10mm  PN: BSSRT10 Pcs. 2	11 Expander  PN: BBE14A Pcs. 2	12 Taper Nut  PN: NUT 12 Pcs. 2	13 Bar End Weight  PN: BEW35 Pcs. 2			

CAUTION:

Installation of the handguard is safety-relevant work and can be complicated. We recommend the installation be performed by a motorcycle service technician. Rideworx accepts no liability for damages caused by improper mounting. All screws, bolts and nuts, including all replacement hardware provided by Rideworx, should be tightened to the torque specified in the table. After the first 50km of riding check all screws, bolts and nuts are tightened to the correct torque. We recommend a medium strength liquid thread lock product on all fasteners.

Recommended Torque Settings	
M6	10 Nm (7.4 lbf ft)
M8	23 Nm (17 lbf ft)

WARNING:

Check operation of all handlebar controls, specifically the throttle, front brake, kill switch and clutch to ensure they are operating correctly and are in accordance with the OEM specifications. Do not ride the motorcycle if any controls are not operating correctly. Check periodically that all bolts are tight.



Phone: +61 (0)2 4271 8244
 Email: info@barkbusters.net
 Web: www.barkbusters.net

Barkbusters

Disclaimer:

A failure to follow these fitting instructions could cause serious injury, death or property damage. These handguards are intended solely for use with motorcycles/ATV/snowmobiles/scooters that have not been modified. They are not designed to prevent injury or death while riding or in an accident or crash. The user must ensure that all controls are free of the handguards every time that they ride. By installing and/or using this product you acknowledge that you accept these terms and have followed the fitting instructions.