

Denali Light Mount

Kawasaki Concours & GTR1400 '08-'14

LAH.08.10200 Instructions Rev:00

PLEASE READ BEFORE INSTALLING

TWISTED THROTTLE products should be installed by a qualified, experienced motorcycle technician. If you are unsure of your ability to properly install a product, please have the product installed by your local motorcycle dealer. TWISTED THROTTLE takes no responsibility for damages caused by improper installation.


All screws, bolts, and nuts, including all replacement hardware provided by TWISTED THROTTLE should be tightened to the torque specified in the OEM maintenance manual for your motorcycle. If no torque specifications are provided in the OEM maintenance manual, the following torques may be used:

M5.....	3.5 ft-lbs (5 Nm)
M6.....	7 ft-lbs (9.6 Nm)
M8.....	13 ft-lbs (18 Nm)

All screws, bolts, and nuts should be checked after driving the first 30 miles (50 km) to ensure that all are tightened to the proper torque.

Medium strength liquid thread-locker (i.e., "Loctite") should be used to secure all screws, bolts, and nuts.

Distributed by:	
Twisted Throttle LLC 570 Nooseneck Hill Rd Exeter, RI 02822	phone: 855.255.5550 fax: 401.223.6955 www.twistedthrottle.com

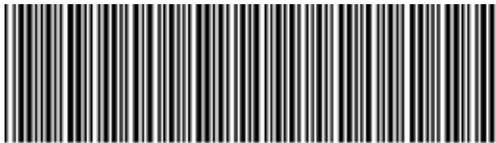

Step 1

1
Right Side Bracket

LAH.08.005
Qty.....1

2
Left Side Bracket

LAH.08.004
Qty.....1

3
Countersunk Screw

M6x35.....DIN 7991
Qty.....4

4
Spacer

OD: 12.7mm ID: 6.5mm L: 11.1mm
Qty.....4

5
Hex Head Screw


M8x20.....DIN 933
Qty.....2

6
Nylock Nut

M8.....DIN 985
Qty.....2

7
Nut Cap

M8
Qty.....2

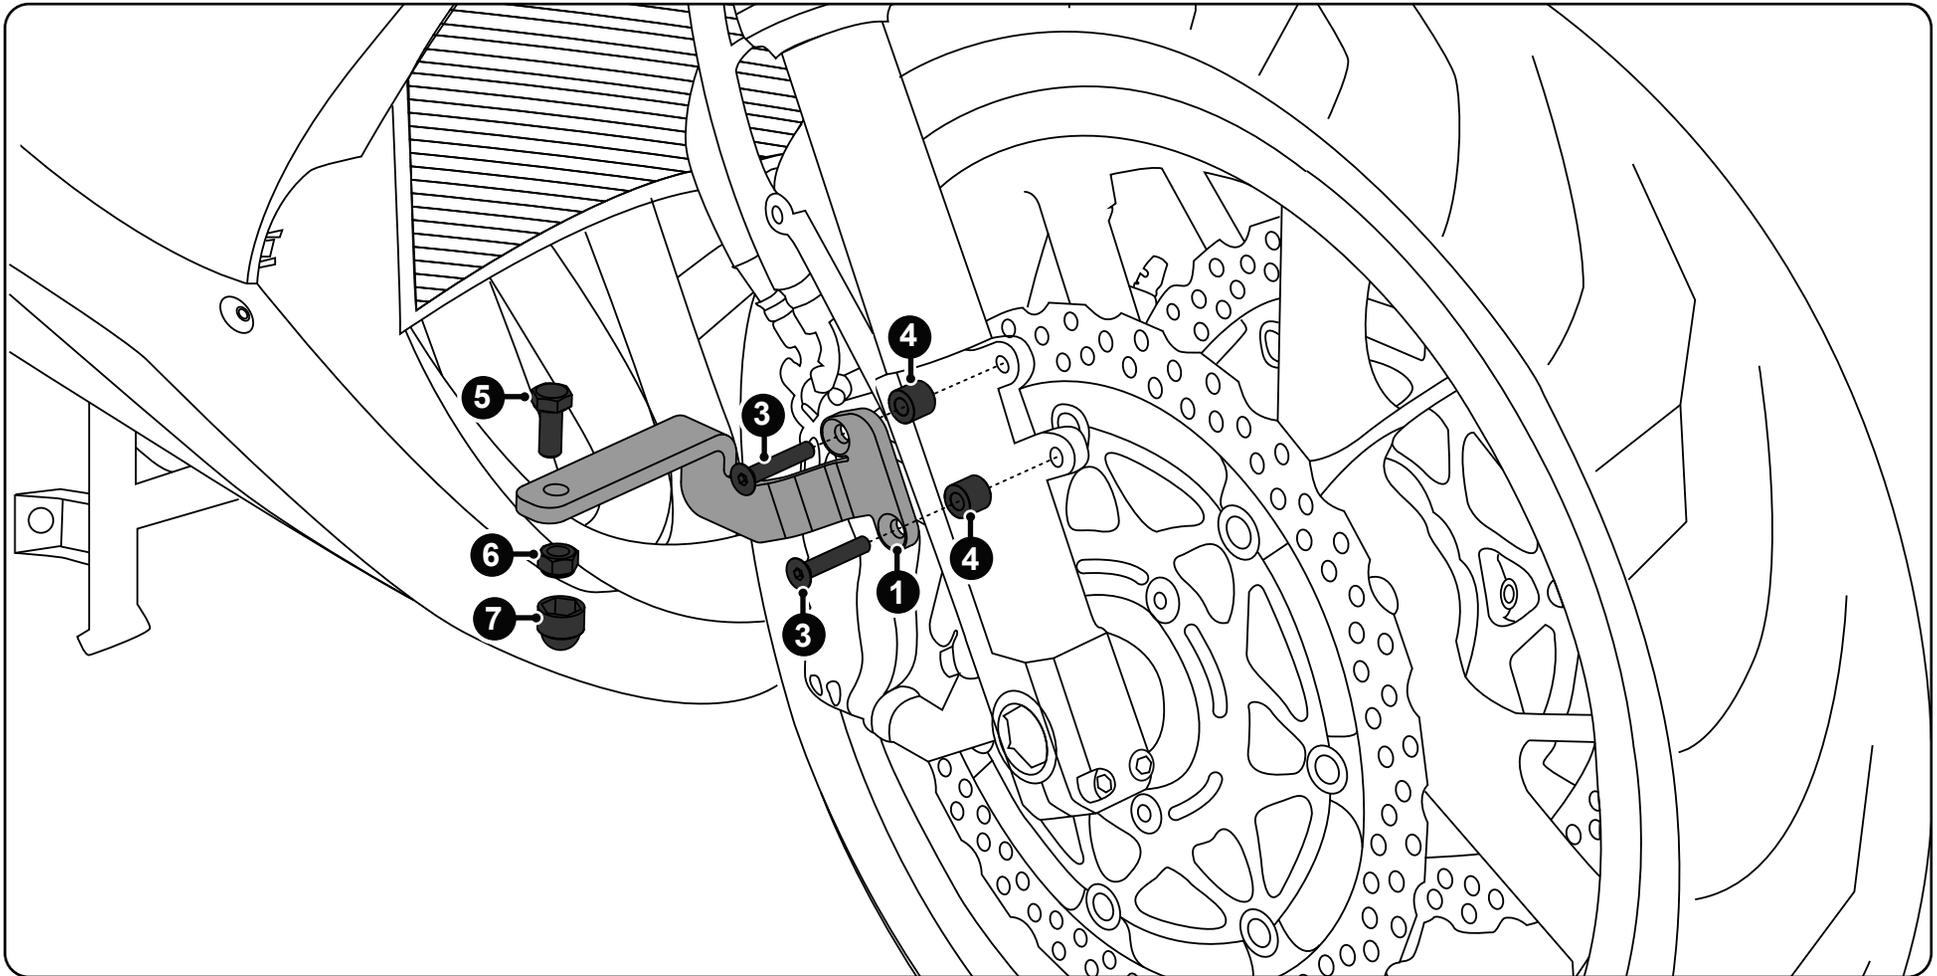

Step One: Remove the front fender to expose the mounting points illustrated above. Use the bolts (#3) and spacers (#4) to mount the left and right side brackets (#1 & #2) to the motorcycle using the OEM fender bracket as the backing plate. Use the remaining hardware, bolts (#5), Nuts (#6) and nut caps (#7) to mount the light pods to the brackets. Reinstall the front fender to the motorcycle.