

Denali Single Switch Mount

For Vertical Perch Bolts

MBK.00.10300 Instructions Rev:01

PLEASE READ BEFORE INSTALLING

TWISTED THROTTLE products should be installed by a qualified, experienced motorcycle technician. If you are unsure of your ability to properly install a product, please have the product installed by your local motorcycle dealer. TWISTED THROTTLE takes no responsibility for damages caused by improper installation.


All screws, bolts, and nuts, including all replacement hardware provided by TWISTED THROTTLE should be tightened to the torque specified in the OEM maintenance manual for your motorcycle. If no torque specifications are provided in the OEM maintenance manual, the following torques may be used:

M5.....	3.5 ft-lbs (5 Nm)
M6.....	7 ft-lbs (9.6 Nm)
M8.....	13 ft-lbs (18 Nm)

All screws, bolts, and nuts should be checked after driving the first 30 miles (50 km) to ensure that all are tightened to the proper torque.

Medium strength liquid thread-locker (i.e., "Locktite") should be used to secure all screws, bolts, and nuts.


Distributed by:	
Twisted Throttle LLC 570 Noose Neck Rd Exeter, RI 02822	phone: 855.255.5550 fax: 401.223.6955 www.twistedthrottle.com

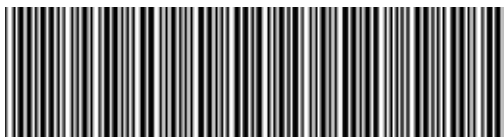

Installation Instructions


Step 1

1
Mounting Bracket




MBK.00.003
Qty.....1

2
Socket Head Screw




M6x30.....DIN 912
Qty.....1

3
Socket Head Screw




M5x40.....DIN 912
Qty.....1

4
Spacer




Da: 9.5 Di: 6.5 H:14.3
Qty.....1

5
Spacer



Da: 9.5 Di: 6.5 H: 9.5
Qty.....1

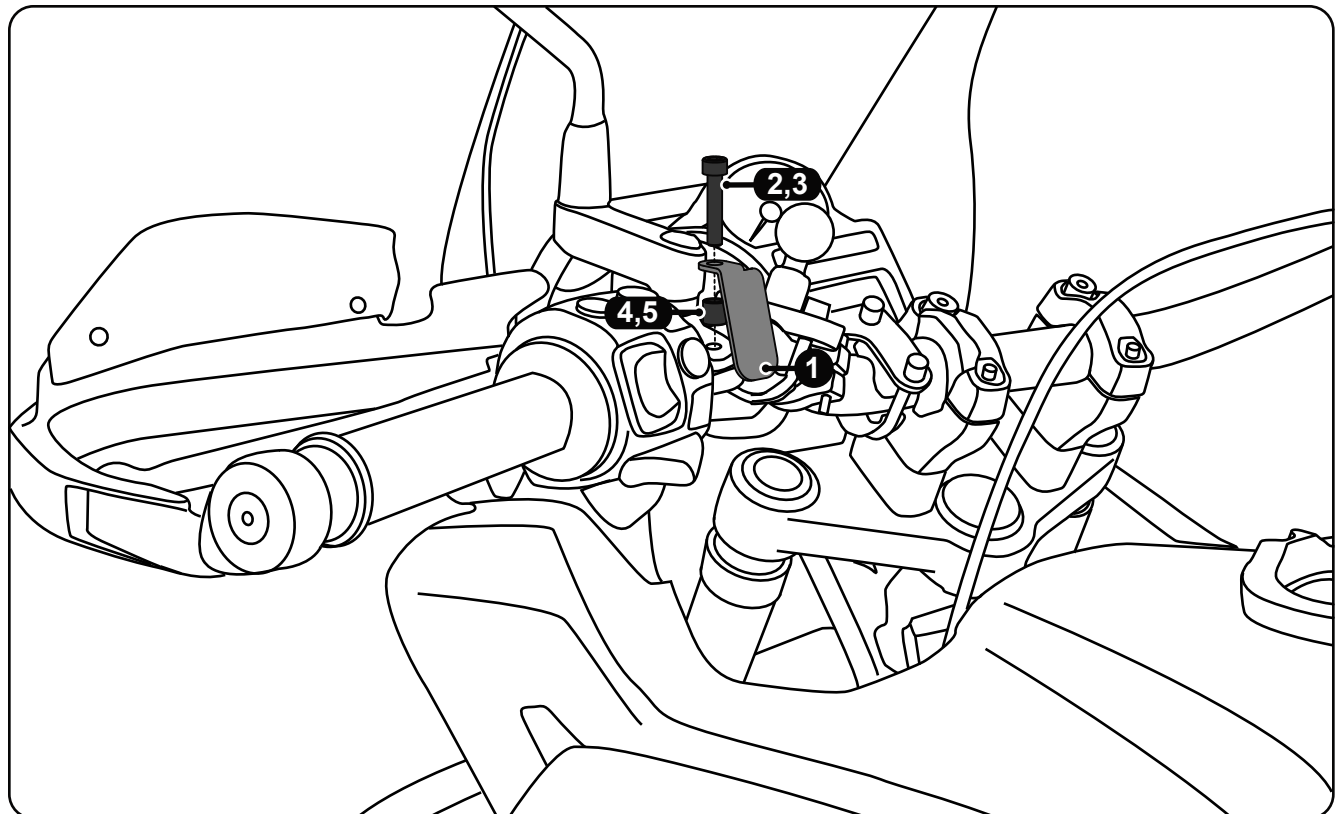

Step One: Attach the mounting bracket to the perch using the included bolts and spacers to obtain the proper thread length. The bracket may be mounted off either bolt on the perch and rotated in any direction to best suit your motorcycle.