

Denali Single Switch Mount

For Horizontal Perch Bolts

MBK.00.10100 Instructions Rev:01

PLEASE READ BEFORE INSTALLING

TWISTED THROTTLE products should be installed by a qualified, experienced motorcycle technician. If you are unsure of your ability to properly install a product, please have the product installed by your local motorcycle dealer. TWISTED THROTTLE takes no responsibility for damages caused by improper installation.

All screws, bolts, and nuts, including all replacement hardware provided by TWISTED THROTTLE should be tightened to the torque specified in the OEM maintenance manual for your motorcycle. If no torque specifications are provided in the OEM maintenance manual, the following torques may be used:

M5.....	3.5 ft-lbs (5 Nm)
M6.....	7 ft-lbs (9.6 Nm)
M8.....	13 ft-lbs (18 Nm)

All screws, bolts, and nuts should be checked after driving the first 30 miles (50 km) to ensure that all are tightened to the proper torque.



Medium strength liquid thread-locker (i.e., "Locktite") should be used to secure all screws, bolts, and nuts.

Distributed by:

Twisted Throttle LLC
570 Noose Neck Rd
Exeter, RI 02822

phone: 855.255.5550
fax: 401.223.6955
www.twistedthrottle.com

Installation Instructions

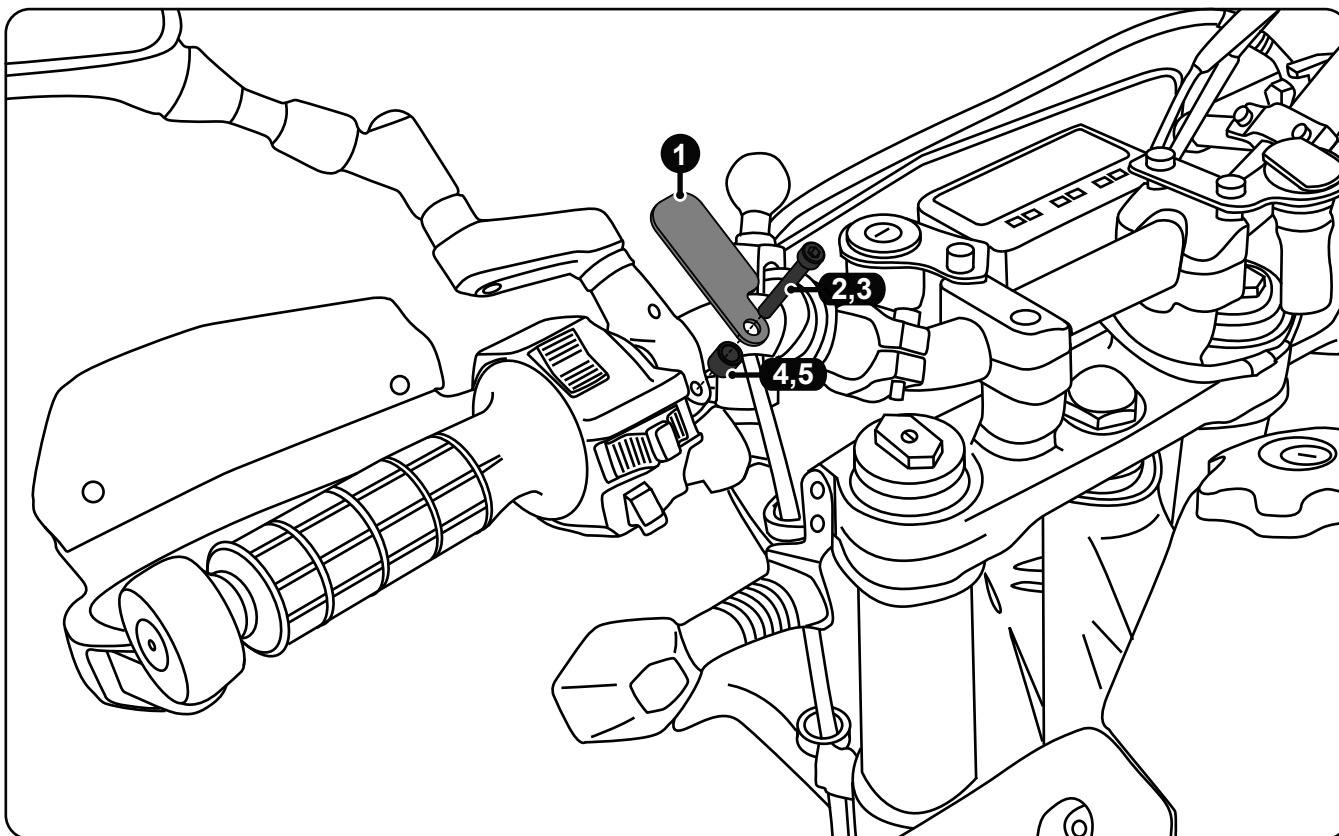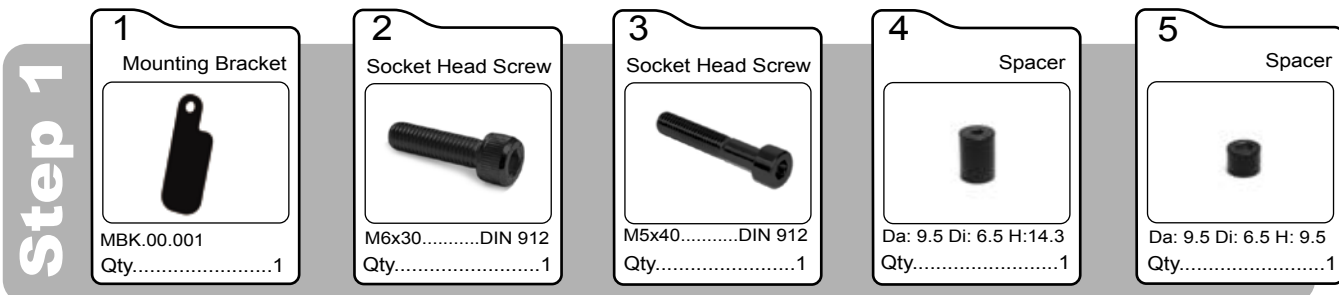

Step One: Attach the mounting bracket to the perch using the included bolts and spacers to obtain the proper thread length. The bracket may be mounted off either bolt on the perch and rotated in any direction to best suit your motorcycle.

