

YAMAHA FJR 1300 STEM MOUNT KIT Part # 4-10998

Tool Kit Includes:

1 3/16" hex key

1 5/32" hex key

LIMITED WARRANTY AND DISCLAIMER

High Gear Specialties, Inc. ("High Gear") warrants the TechMount (the "Mount"), as described and identified in the accompanying installation instructions, to be free from defects in material and workmanship for a period of one (1) year from purchase (the "Warranty Period"). All warranty claims by the customer shall be made to High Gear Specialties, Inc., 1123 Crown Park Cir., Winter Garden, FL 34787. Replacements shall not interrupt or prolong the term of this Warranty.

High Gear's obligation under this Warranty is limited, at its sole and exclusive option, to either the repair or replacement of the Mount where a defect has been claimed during the Warranty Period, and which is returned, freight prepaid, to High Gear at the address given above. Upon inspection by High Gear, the Mount or parts thereof which prove to be defective will be repaired or replaced at no charge.

THE WARRANTY SET FORTH ABOVE IS EXCLUSIVE AND NO OTHER WARRANTY, WHETHER WRITTEN OR ORAL, IS EXPRESSED OR IMPLIED. HIGH GEAR SPECIFICALLY DISCLAIMS THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE.

The warranties set forth herein apply only to the original customer and are conditional upon the customer giving prompt notice to High Gear of any discovered defects during the Warranty Period. High Gear shall not be responsible for any other defects or damage, including, but not limited to, any defects or damage caused by or resulting from: (a) alterations to the Mount by anyone other than High Gear; (b) accident; (c) damage due to an intentional or negligent act of a third party; (d) abuse or negligence; (e) wear and tear; (f) mishandling; (g) failure to use the Mount in a safe and reasonable manner, or (h) force majeure. If the Mount, in the judgment of High Gear, shows evidence of having been altered, modified or repaired without the authorization of High Gear, the warranties set forth herein shall not apply.

High Gear's cumulative liability for damages of any kind whatsoever arising out of the use or possession of the Mount, regardless of the form of action, whether in contract or tort, including negligence or strict liability, shall be limited to the purchase price of the Mount that caused the damages or that is the subject matter of, or is directly related, to the cause of action.

IN NO EVENT SHALL HIGH GEAR BE LIABLE FOR INDIRECT, SPECIAL, INCIDENTAL, CONTINGENT OR CONSEQUENTIAL DAMAGES ARISING OUT OF THE USE OR POSSESSION OF THE MOUNT, WHETHER OR NOT HIGH GEAR HAS RECEIVED NOTICE OF THE POSSIBILITY OR CERTAINTY OR SUCH DAMAGES OR LOSSES.

25575 v1

WARNING


The mount which you have just purchased is intended for the convenient transport of electronic equipment and other portable items on your motorcycle. Improper installation or use of the mount can potentially result in serious injury or death. We strongly recommend that you closely follow the accompanying installation instructions and employ good judgment in your use of the mount. Do not allow yourself to become distracted by whatever equipment or other item is secured by the mount when you are riding. Always wear a helmet, proper eyewear and protective clothing when riding, and never ride when under the influence of alcohol or drugs.

25584 v1

TECHMOUNT

4-10998 Yamaha FJR StemMount

(Example on accessory installation shown below)

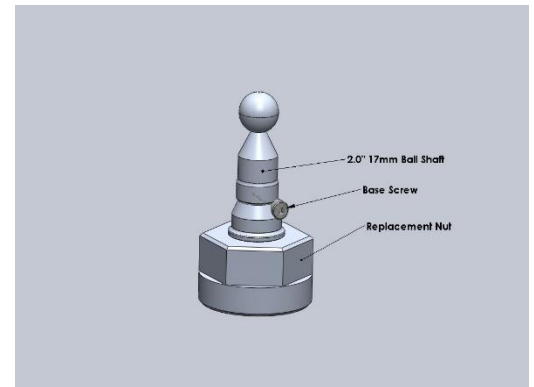

Remove locking ring and slide onto mount.



Snap accessory top onto shaft.



Tighten locking ring securely.

This mount system is designed to securely mount your device onto any Yamaha FJR 1300 by replacing the original stem nut. Please follow the installation instructions carefully. The mount is fully assembled and ready to install.

Step 1. Remove the factory stem nut using a 36mm socket and leave the stock washer in place.

Step 2. Remove the **Base Screw** and pull **Ball Shaft** out. If necessary for the socket to fit onto nut, remove the Base Extension. This will allow a 36mm socket to be used to install and torque onto bike.

Step 3. Install the **Replacement Stem Nut** onto your stem bolt and torque to OEM specifications (**82 lb/ft**) using the same 36mm socket from step 1. Align the pin in the **Base Extension** to the counter-rotation hole in the **Replacement Stem Nut** and tighten the **Base Extension** securely. Re-install the upper assembly and **Base Screw** from Step 2.

Step 4. To add accessories. Simply pop onto the 17mm ball shaft and tighten the locking ring.

Step 5. To remove the entire upper section of the mount. Remove the **Base Screw** and lift straight out.

Note: The maximum weight of your mounted device should not exceed 2 lbs. (1 k).

Note: **Check that all fasteners are tight and mount your device.**